


FCD-503
User Manual
(Ver 1.0x)


- A. Outside dimension
- B. A48 USB board jumper setting
- C. A49 Terminal board jumper setting
- D. Exploded diagram



A. Outside dimemnsion

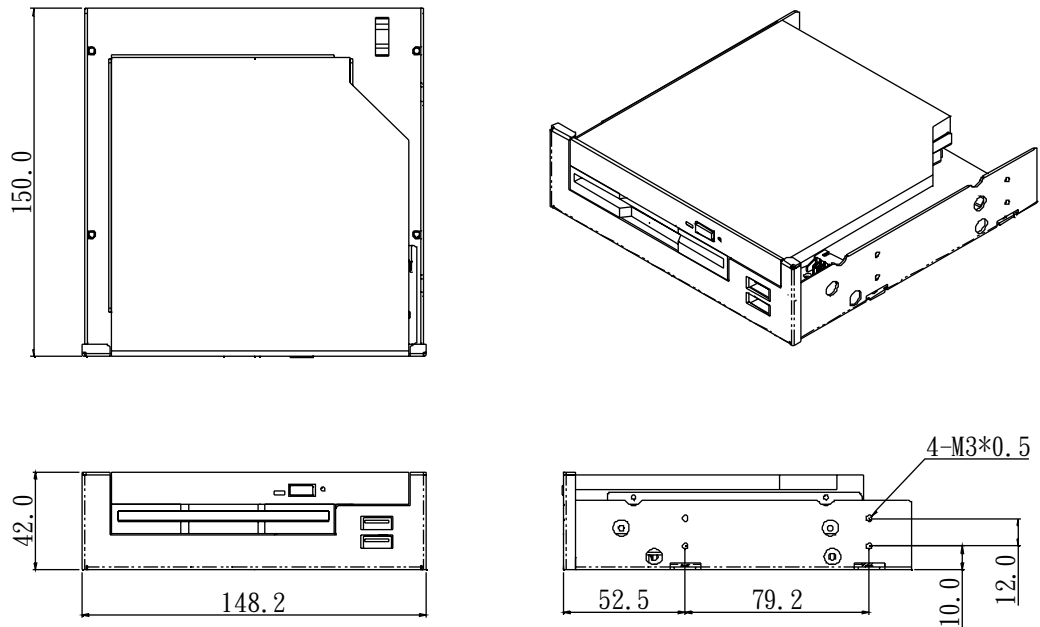


B. A48 USB board jumper setting

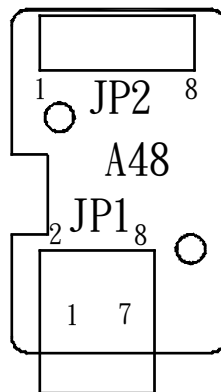

JP2 :

1	VCC2
2	D2+
3	D2-
4	GND2
5	GND1
6	D1-
7	D1+
8	VCC1

C. A49 Terminal board jumper setting

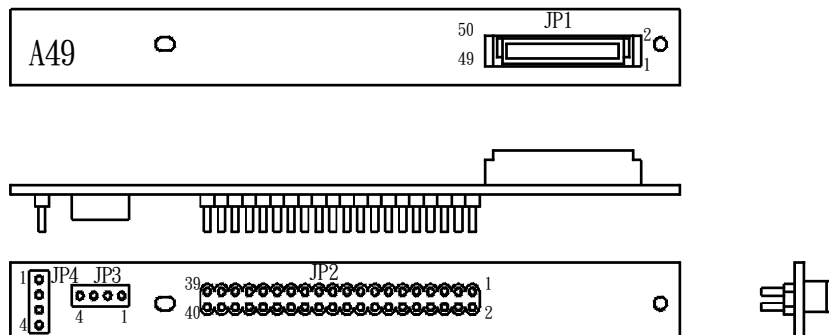

(**Remark: This connect board is design for TOSHIBA XM 7002B slim
CD-ROM, Q.lity SCR-242E , DELTA OIP-SD2400A, VENTECH VIN-S24A or
compatible)

JP1 :

1	Audio L-CH	2	Audio R-CH
3	Audio-GND	4	Digital GND
5	/RESET	6	DD8
7	DD7	8	DD9
9	DD6	10	DD10
11	DD5	12	DD11
13	DD4	14	DD12
15	DD3	16	DD13
17	DD2	18	DD14
19	DD1	20	DD15
21	DD0	22	DMARQ
23	Digital GND	24	/DIOR
25	/DIOW	26	Digital GND
27	IORDY	28	/DMACK
29	INTRQ	30	/IOCS16
31	DA1	32	/PDIAG
33	DA0	34	DA2
35	/CS1FX	36	/CS3FX
37	/DASP	38	+5V
39	+5V	40	+5V
41	+5V	42	+5V
43	GND	44	GND
45	GND	46	GND

47	CSEL	48	GND
49	N/C	50	Vender unique

JP2 :

1	/RESET	2	Digital GND
3	DD7	4	DD8
5	DD6	6	DD9
7	DD5	8	DD10
9	DD4	10	DD11
11	DD3	12	DD12
13	DD2	14	DD13
15	DD1	16	DD14
17	DD0	18	DD15
19	Digital GND	20	KEY(N/C)
21	DMARQ	22	Digital GND
23	/DIOW	24	Digital GND
25	/DIOR	26	Digital GND
27	IORDY	28	CSEL
29	/DMACK	30	Digital GND
31	INTRQ	32	/IOCS16
33	DA1	34	/PDIAG
35	DA0	36	DA2
37	/CS1FX	38	/CS3FX
39	/DASP	40	Digital GND


JP3 :

1	+5V
2	GND
3	GND
4	N/A

JP4 :

1	Audio R-CH
2	Audio -GND
3	Audio-GND
4	Audio L-CH

D. Exploded diagram

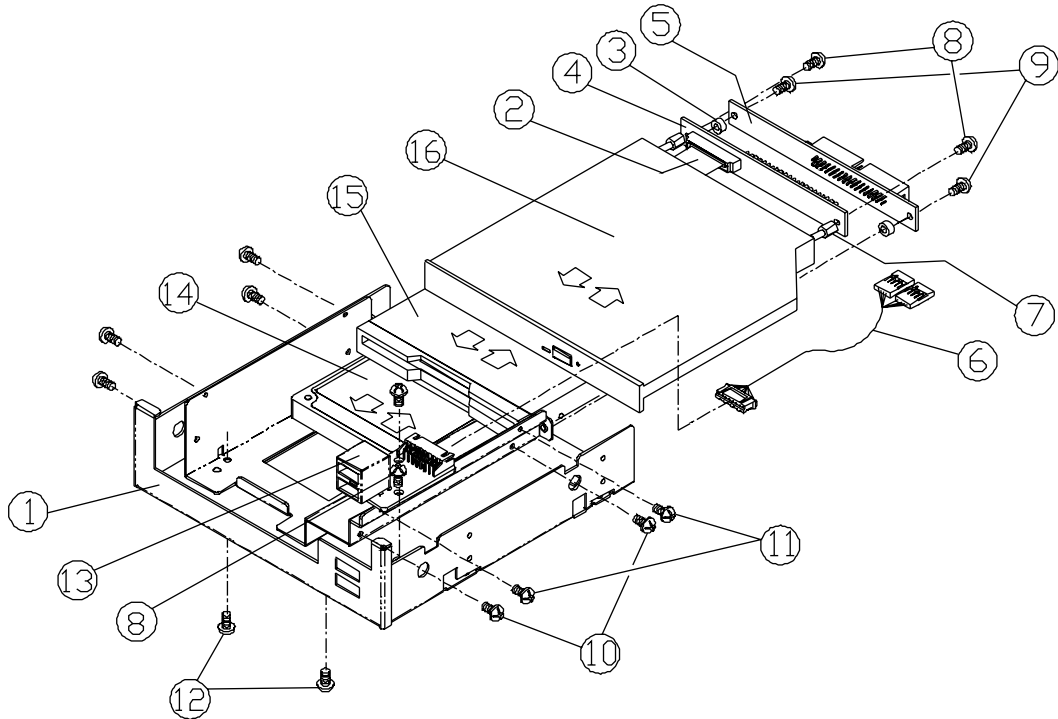

Item	Part no.	Description	Q'ty	Remark
1	41011-0258XX-00	Disk drive bay	1	
2	32400-001100	FFC Cable	1	
3	46005-001900	Spacer support	2	
4	SLIM-05	SLIM-05 Board	1	
5	131A49-00-010	A49 Terminal Board	1	
6	32000-000152	USB Cable	1	
7	44310-030061	Hex head stud. M3*6	2	
8	44003-030062	Screw M3*6	4	
9	44003-020061	Screw M2*6	2	
10	44003-025041	Screw M2.5*4	4	
11	44003-020031	Screw M2*3	4	
12	44013-030041	Screw M3*4(flat head)	4	
13	131A48-00-000	A48. USB Board.	1	
14		2.5" HDD	1	Option
15		Slim-floppy	1	Option
16		Slim-cdrom	1	Option