

# SUPER<sup>®</sup>

SUPER X6DAL-G  
SUPER X6DAL-TG

## USER'S MANUAL

Revision 1.0a

---

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates.

**Please Note: For the most up-to-date version of this manual, please see our web site at [www.supermicro.com](http://www.supermicro.com).**

SUPERMICRO COMPUTER reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software, if any, and documentation may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any medium or machine without prior written consent.

IN NO EVENT WILL SUPERMICRO COMPUTER BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, THE VENDOR SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

---

Unless you request and receive written permission from SUPER MICRO COMPUTER, you may not copy any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

## Preface

### About This Manual

This manual is written for system integrators, PC technicians and knowledgeable PC users. It provides information for the installation and use of the **SUPER<sup>®</sup>** X6DAL-G/X6DAL-TG motherboard. The **SUPER<sup>®</sup>** X6DAL-G/X6DAL-TG supports single or dual Intel<sup>®</sup> Xeon Nocona<sup>™</sup> processors at a 800 MHz front side bus. Based upon Intel's NetBurst microarchitecture with EM64T support, the Nocona processor supports IA-32 and IA-64 software and includes features found in the Xeon<sup>™</sup> processor such as Hyper Pipelined Technology, which includes a multi-stage pipeline, allowing the processor to operate at much higher core frequencies. Packaged in a 604-pin Flip Chip Micro Pin Grid Array(FC-mPGA4) platform in a Zero Insertion Force(ZIF) socket (mPGA 604), the Nocona Processor (800 MHz) supports Hyper-Threading Technology and is ideal for high performance workstation and server environments with up to two processors on one system bus. Please refer to the motherboard specifications pages on our web site (<http://www.supermicro.com/products/motherboard/>) for updates on supported processors. This product is intended to be professionally installed.

### Manual Organization

**Chapter 1** begins with a checklist of what should be included in your mainboard box, describes the features, specifications and performance of the motherboard and provides detailed information about the chipset.

**Chapter 2** begins with instructions on handling static-sensitive devices. Read this chapter when you want to install the processor and DIMM memory modules and when mounting the mainboard in the chassis. Also refer to this chapter to connect the floppy and hard disk drives, SCSI drives, the IDE interfaces, the parallel and serial ports, the keyboard and mouse, the power supply and various control panel buttons and indicators.

If you encounter any problems, see **Chapter 3**, which describes troubleshooting procedures for the video, the memory and the setup configuration stored in CMOS. For quick reference, a general FAQ [Frequently Asked Questions] section is provided.

**Chapter 4** includes an introduction to BIOS and provides detailed information on running the CMOS Setup utility.

**Appendix A** lists BIOS Error Beep Codes and DS LED POST Codes.

**Appendix B** provides BIOS POST codes.

**Appendix C** provides software installation instructions.

**Appendix D** provides installation instructions on Adaptec's SATA HostRAID Driver based on Marvell's chip.

## Table of Contents

### Preface

About This Manual .....	iii
Manual Organization .....	iii

### Chapter 1: Introduction

1-1 Overview .....	1-1
Checklist .....	1-1
Contacting Supermicro .....	1-2
<b>SUPER</b> X6DAL-G/X6DAL-TG Image .....	1-3
<b>SUPER</b> X6DAL-G/X6DAL-TG Layout .....	1-4
<b>SUPER</b> X6DAL-G/X6DAL-TG Quick Reference .....	1-5
Motherboard Features .....	1-6
Intel Lindenhurst Chipset: System Block Diagram .....	1-8
1-2 Chipset Overview .....	1-9
1-3 Special Features .....	1-9
BIOS Recovery .....	1-9
Recovery from AC Power Loss .....	1-9
1-4 PC Health Monitoring .....	1-10
1-5 ACPI Features .....	1-11
1-6 Power Supply .....	1-13
1-7 Super I/O .....	1-13

### Chapter 2: Installation

2-1 Static-Sensitive Devices .....	2-1
Precautions .....	2-1
Unpacking .....	2-1
2-2 PGA Processor and Heatsink Installation .....	2-2
2-3 Installing DIMMs .....	2-5
2-4 I/O Ports/Control Panel Connectors .....	2-6
2-5 Connecting Cables .....	2-8
ATX Power Connector .....	2-8
Processor Power Connector .....	2-8
NMI Button .....	2-8
Power LED .....	2-8
HDD LED .....	2-9
NIC1 LED .....	2-9
Overheat LED .....	2-9

Power Fail LED .....	2-9
Reset Button .....	2-10
Power Button .....	2-10
Chassis Intrusion .....	2-10
Universal Serial Bus (USB0/1) .....	2-10
Extra Universal Serial Bus Headers (USB2/3) .....	2-11
Serial Ports .....	2-11
GLAN (Ethernet Port) .....	2-11
ATX PS/2 Keyboard and Mouse Ports .....	2-11
Fan Headers .....	2-12
Power LED/Speaker Header (JD1) .....	2-12
Wake-On-Ring .....	2-12
Keylock .....	2-12
Wake-On-LAN .....	2-13
SATA Activity LED .....	2-13
2-6 Jumper Settings .....	2-14
Explanation of Jumpers .....	2-14
GLAN Enable/Disable .....	2-14
CMOS Clear .....	2-14
USB Wake-Up .....	2-15
Watch Dog Enable/Disable .....	2-15
System Bus Speed .....	2-15
Serial ATA Enable/Disable .....	2-16
Thermal Fan Control .....	2-16
Keyboard Wake-Up .....	2-16
2-7 Onboard Indicators .....	2-17
GLAN LEDs .....	2-17
2-8 Parallel Port, Floppy/Hard Disk Drive and SCSI Connections .....	2-18
Parallel Port Connector .....	2-18
Floppy Connector .....	2-18
IDE Connectors .....	2-19

## Chapter 3: Troubleshooting

3-1 Troubleshooting Procedures .....	3-1
Before Power On .....	3-1
No Power .....	3-1
No Video .....	3-1
Memory Errors .....	3-2
Losing the System's Setup Configuration .....	3-2

3-2	Technical Support Procedures .....	3-2
3-3	Frequently Asked Questions .....	3-3
3-4	Returning Merchandise for Service .....	3-5

**Chapter 4: BIOS**

4-1	Introduction .....	4-1
4-2	Main BIOS Setup .....	4-2
4-3	Advanced Setup .....	4-3
4-4	Boot Setup .....	4-19
4-5	Security Setup .....	4-22
4-6	Exit .....	4-23

**Appendices:**

Appendix A:	BIOS Error Beep Codes and DS7/DS8 LED POST Codes .....	A-1
Appendix B:	BIOS POST Codes .....	B-1
Appendix C:	Installing Software Drivers and the Operating System .....	C-1
Appendix D:	Installing Adaptec's SATA HostRAID Controller based on Marvell's Chip .....	D-1

# Chapter 1

## Introduction

### 1-1 Overview

#### Checklist

Congratulations on purchasing your computer motherboard from an acknowledged leader in the industry. Supermicro boards are designed with the utmost attention to detail to provide you with the highest standards in quality and performance. Check that the following items have all been included with your motherboard. If anything listed here is damaged or missing, contact your retailer. All included with Retail Box.

One (1) Supermicro Mainboard

One (1) ribbon cable for IDE devices (CBL-036)

One (1) floppy ribbon cable (CBL-022)

One (1) SATA cable (CBL-044) (\*X6DAL-G)

Four (4) SATA cables (CBL-044) (\*X6DAL-TG)

One (1) CPU mounting plate (SKT-159)

Two (2) CPU retention brackets (SKT-158: pre-installed)

One (1) I/O backpanel shield (CSE-PT2)

One (1) Supermicro CD containing drivers and utilities (CDR\_INTC)

One (1) User's/BIOS Manual

## **Contacting Supermicro**

### **Headquarters**

Address: SuperMicro Computer, Inc.  
980 Rock Ave.  
San Jose, CA 95131 U.S.A.  
Tel: +1 (408) 503-8000  
Fax: +1 (408) 503-8008  
Email: [marketing@supermicro.com](mailto:marketing@supermicro.com) (General Information)  
[support@supermicro.com](mailto:support@supermicro.com) (Technical Support)  
Web Site: [www.supermicro.com](http://www.supermicro.com)

### **Europe**

Address: SuperMicro Computer B.V.  
Het Sterrenbeeld 28, 5215 ML  
's-Hertogenbosch, The Netherlands  
Tel: +31 (0) 73-6400390  
Fax: +31 (0) 73-6416525  
Email: [sales@supermicro.nl](mailto:sales@supermicro.nl) (General Information)  
[support@supermicro.nl](mailto:support@supermicro.nl) (Technical Support)  
[rma@supermicro.nl](mailto:rma@supermicro.nl) (Customer Support)

### **Asia-Pacific**

Address: SuperMicro, Taiwan  
4F, No. 232-1 Liancheng Road  
Chung-Ho 235, Taipei County, Taiwan, R.O.C.  
Tel: +886-(2) 8226-3990  
Fax: +886-(2) 8226-3991  
Web Site: [www.supermicro.com.tw](http://www.supermicro.com.tw)

### Technical Support:

Email: [support@supermicro.com.tw](mailto:support@supermicro.com.tw)  
Tel: 886-2-8228-1366, ext.132 or 139




**Figure 1-1. SUPER X6DAL-G/X6DAL-TG Image**



(\*The difference between the X6DAL-G and the X6DAL-TG is that the X6DAL-TG has an additional 4-port SATA2 Marvell Controller.)

**Figure 1-2. SUPER X6DAL-G/X6DAL-TG Motherboard Layout**

(not drawn to scale)

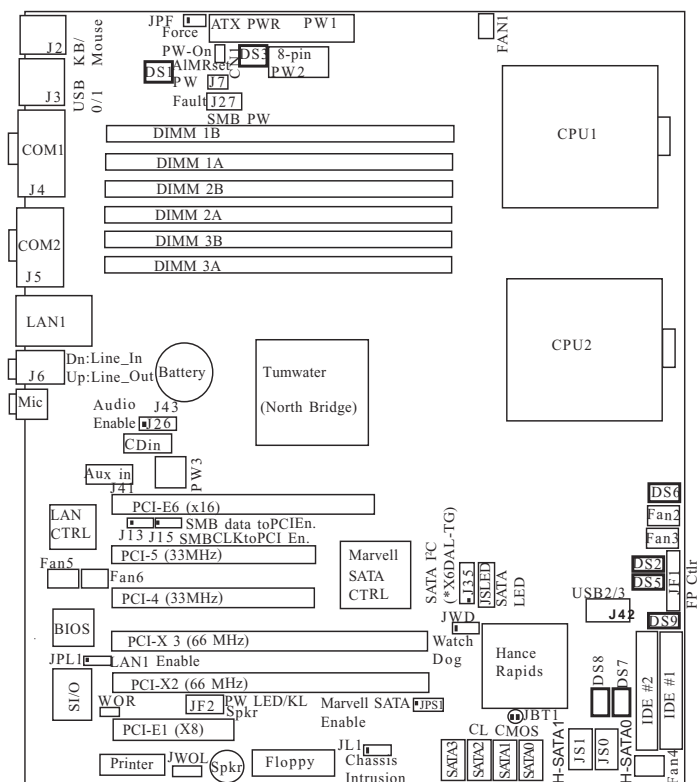

**Notes:**

1. "■" indicates Pin 1.

**2. The differences between the X6DAL-G and the X6DAL-TG are:**

- \* Marvell's SATA2 controller is available on the X6DAL-TG only.
- \* There are additional four SATA2 ports (using Marvell's SATA2 controller) on the X6DAL-TG.

## Quick Reference ( X6DAL-G/X6DAL-TG)

<b><u>Jumper</u></b>	<b><u>Description</u></b>	<b><u>Default Setting</u></b>
CN1	Alarm Reset	Open (Disabled)
J13	SMB Data to PCI Enable	Closed (Enabled)
J15	SMB Clock to PCI Enable	Closed (Enabled)
J26	Audio Enable	Closed (Enabled)
JBT1	Clear CMOS	See Chapter 2
JPF	Force Power On Enable	Open (Disabled)
JPL1	LAN1 Enable	Pins 1-2 (Enabled)
JPS1	Marvell's SATA Enable (*X6DAL-TG)	Pins 1-2 (Enabled)
JWD	Watch Dog Enable	Pins 2-3 (NMI)

<b><u>Connector</u></b>	<b><u>Description</u></b>
ATX PWR	Primary 24-pin ATX PWR Connector
PWR2/PWR 3	12V 8-pin CPU PWR/12V 4-pin PWR Connectors
COM1(J4)/COM2 (J5)	COM1/COM2 Serial Port Connectors
DS7, DS8	POST Code LED (*See Appendix A)
FAN #1-#6	CPU/Chassis Fans Headers
DIMM#1A-#3B	Memory (DIMM) Slots#(1A,1B, 2A,2B, 3A,3B)
LAN 1	G-bit Ethernet Port
IDE1, IDE2	IDE1/2 Hard Disk Drive Connectors
J2	Keyboard/Mouse
J6	Down: Line_in, Up: Line_out
J7	Power Fault Header
J24	Floppy Disk Drive Connector
J27	Power System Management
J35	SATA SMB (I <sup>2</sup> C) Header (*X6DAL-TG Only)
J41	Aux. In
J50	CD in
J61	Microphone
JF1	Front Panel Control (* See Chapter 2)
JF2	Speaker, PWR LED, Keylock (*See Chapter 2)
JL1	Chassis Intrusion Header
JSLED	SATA LED Header
Parallel	Parallel (Printer) Port
PCI-4, PCI-5	PCI 32-bit slots
PCI-X2, PCI-X3	PCI-X 64-bit 66MHz
PCI-E1, PCI-E6	PCI-Express x8/x16 @4GB/s slots
H-SATA 0/1 (JS0/JS1)	Hance Rapids-Serial ATA Ports 0/1
SATA0-3(J52-J55)	Marvel-Serial ATA Ports 0/1/2/3 (*X6DAL-TG Only)
WOL(JWOL)	Wake-on-LAN
WOR (JWOR)	Wake-on-Ring Header
USB 0/1	Back Panel Universal Serial Bus Ports
USB 2/3 (J42)	Front Panel Universal Serial Bus Ports

## **Motherboard Features**

### **CPU**

- Single or dual Intel® 604-pin Nocona™ processors (\*w/EM64T support) at 800 MHz front side (system) bus speed.

### **Memory**

- Six 184-pin DIMM sockets supporting 12 GB/24GB Registered ECC DDR 333/266 (PC2700/PC2100) SDRAM

**Notes:** 1. Memory size is set via BIOS. 2. Interleaved memory; requires memory modules to be installed in pairs. See Section 2-3 for details.

### **Chipset**

- Intel E7525 (Tumwater) chipset

### **Expansion Slots**

- One PCI-E (x16@4GB/sec)
- One PCI-E (x8@2GB/sec)
- Two 64-bit 66MHz PCI-X
- Two 32-bit 33MHz PCI slots

### **BIOS**

- 8 Mb AMI® Flash ROM
- APM 1.2, DMI 2.1, PCI 2.2, ACPI 2.0, Plug and Play (PnP), SMBIOS 2.3

### **PC Health Monitoring**

- Onboard voltage monitors for CPU cores, chipset voltage, 3.3V, +5V, +12V, 3.3V standby, and DIMM voltage.
- Fan status monitor with fan speed control via BIOS
- CPU/chassis temperature monitors
- Environmental temperature monitor and control via Supero Doctor III
- CPU fan auto-off in sleep mode
- CPU slow-down on temperature overheat
- CPU thermal trip support for processor protection, +5V standby alert LED
- Power-up mode control for recovery from AC power loss
- Auto-switching voltage regulator for CPU core
- System overheat LED and control
- Chassis intrusion detection
- System resource alert via Super Doctor III

**ACPI Features**

- Microsoft OnNow
- Slow blinking LED for suspend state indicator
- Main switch override mechanism

**Onboard I/O**

- 1 Intel 82541PI Gigabit Ethernet controller
- 2 EIDE Ultra DMA/100 bus master interfaces
- 1 floppy port interface (up to 2.88 MB)
- 1 EPP/ECP Parallel Port
- PS/2 mouse and PS/2 keyboard ports
- Up to four USB 2.0 (Universal Serial Bus) (2 ports-back panel, 2 ports-front panel)
- 2 Hance Rapids Serial ATA Ports
- Four Marvel Serial ATA2 Ports (\*X6DL-TG only)
- Super I/O
- AC '97 CODEC Audio devices supported
- 2 serial ports

**Other**

- Internal/external modem ring-on
- Wake-on-Ring (WOR)
- Wake-on-LAN (WOL)
- Console redirection

**CD/Diskette Utilities**

- BIOS flash upgrade utility and device drivers

**Dimensions**

- ATX 12" x 10" (304.8 x 254 mm)

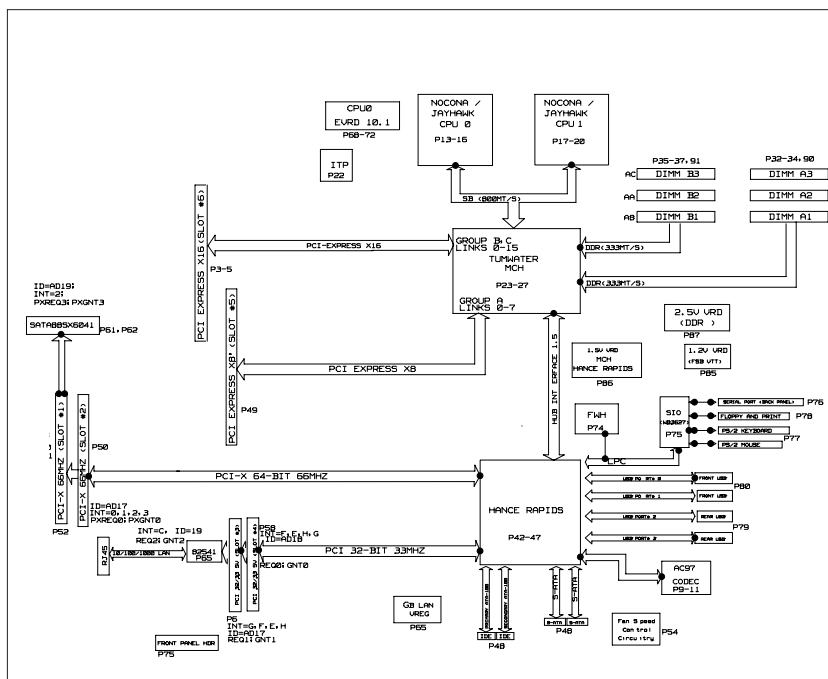


Figure 1-9. Block Diagram of the E7525 Tumwater Chipset

**Note:** This is a general block diagram. Please see the previous Motherboard Features pages for details on the features of each motherboard.

## 1-2 Chipset Overview

Built upon the functionality and the capability of the E7525 Tumwater chipset, the X6DAL-G/X6DAL-TG motherboard provides the performance and feature set required for dual processor-based servers, with configuration options optimized for communications, presentation, storage, computation or database applications. The Intel E7525 Tumwater chipset consists of the following components: the E7525 Tumwater Memory Controller Hub (MCH), the Hance Rapids I/O Controller Hub (Hance Rapids ICH), the Intel PCI-X Hub, and PCI-X Hub (PXH).

The E7525 Tumwater MCH supports single or dual Nocona processors with Front Side Bus speeds of up to 800 MHz(\*Note). Its memory controller provides direct connection to two channels of registered DDR333 or DDR266 with a marched system bus address and data bandwidths of up to 2.67 GB/s (DDR 333) per channel. The E7525 Tumwater also supports the new PCI Express high speed serial I/O interface for superior I/O bandwidth. These interfaces support connection of the MCH to a variety of other bridges that are compliant with the PCI Express Interface Specification, Rev. 1.0a, such as 82801ER GLAN Adaptor, the Dobson I/O processor, H/W RAID controllers and TCP/IP Off-load engines. The MCH interfaces with the Hance Rapids ICH I/O Controller Hub via HI 1.5 Hub Interface. The PXH provides connection between a PCI Express interface and two independent PCI bus interfaces that can be configured for standard PCI 2.3 protocol, as well as the enhanced high-frequency PCI-X protocol. The PXH can be configured to support for 32- or 64-bit PCI devices running at 33 MHz, 66 MHz, 100 MHz, or 133 MHz.

### Hance Rapids ICH System Features

In addition to providing the I/O subsystem with access to the rest of the system, the Hance Rapids ICH I/O Controller Hub integrates many I/O functions.

The Hance Rapids ICH I/O Controller Hub integrates: 2-channel Ultra ATA/100 Bus Master IDE Controller, two Serial ATA (SATA) Host Controllers, SMBus 2.0 Controller, LPC/Flash BIOS Interface, PCI-X (66MHz)/PCI-Express (x16 at 4GB/s) Interface, PCI 2.2 Interface and System Management Controller.

(\*Notes: The CPU FSB speed is set at 800 MHz by the Manufacturer.  
Please do not change the CPU FSB setting.)

## 1-3 Special Features

### BIOS Recovery

The BIOS Recovery function allows you to recover your BIOS image file if the BIOS flashing procedure fails (see Section 3-3).

### Recovery from AC Power Loss

BIOS provides a setting for you to determine how the system will respond when AC power is lost and then restored to the system. You can choose for the system to remain powered off (in which case you must hit the power switch to turn it back on) or for it to automatically return to a power-on state. See the Power Lost Control setting in the Advanced BIOS Setup section (Peripheral Device Configuration) to change this setting. The default setting is Always On.

## 1-4 PC Health Monitoring

This section describes the PC health monitoring features of the SUPER X6DAL-G/X6DAL-TG. All have an onboard System Hardware Monitor chip that supports PC health monitoring.

### Onboard Voltage Monitors for the CPU Cores, Chipset Voltage, +3.3V, +5V, +12V, -12V, +3.3V Standby, +2.5V (for DRAM), +1.5V Standby, +1.2V

An onboard voltage monitor will scan these voltages continuously. Once a voltage becomes unstable, a warning is given or an error message is sent to the screen (only when SuperDoctorIII is installed). Users can adjust the voltage thresholds in SuperDoctorIII.

### Fan Status Monitor with Firmware/Software On/Off Control

The PC health monitor can check the RPM of the cooling fans. The onboard 4-pin CPU and chassis fans are controlled by the power management functions.



## **Environmental Temperature Control via Supero DoctorIII**

The thermal control sensor monitors the CPU temperature in real time and will increase the speed of the thermal control fan whenever the CPU temperature exceeds a user-defined threshold. The overheat circuitry runs independently from the CPU. It can continue to monitor for overheat conditions even when the CPU is in sleep mode. Once it detects that the CPU temperature is too high, it will automatically increase the speed of the thermal control fan to prevent any overheat damage to the CPU. The onboard chassis thermal circuitry can monitor the overall system temperature and alert users when the chassis temperature is too high.

### **TM2/CPU VRM Overheat**

When the CPU reaches 70°C and above (Overheat), the CPU will slow down and CPU Voltage will decrease to reduce CPU power consumption and VRM heat dissipation.

When CPU temperature reaches 78°C and above (\*Default), the system will go into the throttling state. The Overheat LED and Alarm Buzzer will be turned on. The CPU performance will drop 50%. When this happens, you can go to the Health Monitor Setting in the BIOS to reset CPU Overheat Temperature.

### **CPU Overheat LED and Control**

This feature is available when the user enables the CPU overheat warning function in the BIOS. This allows the user to define an overheat temperature. When this temperature is exceeded, the warning LED is triggered and the fans will speed up.

### **Auto-Switching Voltage Regulator for the CPU Core**

The auto-switching voltage regulator for the CPU core can support up to 120W current and auto-sense voltage IDs ranging from .8375V to 1.6V. This will allow the regulator to run cooler and thus make the system more stable.

## 1-5 ACPI Features

ACPI stands for Advanced Configuration and Power Interface. The ACPI specification defines a flexible and abstract hardware interface that provides a standard way to integrate power management features throughout a PC system, including its hardware, operating system and application software. This enables the system to automatically turn on and off peripherals such as CD-ROMs, network cards, hard disk drives and printers. This also includes consumer devices connected to the PC such as VCRs, TVs, telephones and stereos.

In addition to enabling operating system-directed power management, ACPI provides a generic system event mechanism for Plug and Play and an operating system-independent interface for configuration control. ACPI leverages the Plug and Play BIOS data structures while providing a processor architecture-independent implementation that is compatible with both Windows 2000 and Windows NT 5.0.

### **Microsoft OnNow**

The OnNow design initiative is a comprehensive, system-wide approach to system and device power control. OnNow is a term for a PC that is always on but appears to be off and responds immediately to user or other requests.

### **Slow Blinking LED for Suspend-State Indicator**

When the CPU goes into a suspend state, the chassis power LED will start blinking to indicate that the CPU is in suspend mode. When the user presses any key, the CPU will wake-up and the LED will automatically stop blinking and remain on.

### **Main Switch Override Mechanism**

When an ATX power supply is used, the power button can function as a system suspend button to make the system enter a SoftOff state. The monitor will be suspended and the hard drive will spin down. Depressing the power button again will cause the whole system to wake-up. During the SoftOff state, the ATX power supply provides power to keep the required circuitry in the system alive. In case the system malfunctions and

you want to turn off the power, just depress and hold the power button for 4 seconds. This option can be set in the Power section of the BIOS Setup routine.

### **External Modem Ring-On (WOR)**

Wake-up events can be triggered by a device such as the external modem ringing when the system is in the SoftOff state. Note that external modem ring-on can only be used with an ATX 2.01 (or above) compliant power supply.

## **1-6 Power Supply**

As with all computer products, a stable power source is necessary for proper and reliable operation. It is even more important for processors that have high CPU clock rates.

The SUPER X6DAL-G/X6DAL-TG accommodates ATX power supplies. Although most power supplies generally meet the specifications required by the CPU, some are inadequate. You should use one that will supply at least 400W of power. In addition, a +12V, 8-pin CPU power supply and a +12V, 4-pin Aux. power supply are also required for high-load configurations. Also your power supply must supply 1.5A for the Ethernet ports.

**NOTE: In addition to the 24-pin main power, a 12V 8-pin power connector (PW2) is required to support Intel Xeon CPUs, and a 12V 4-pin power connector (Aux. PWR) is also required for system power consumption. Failure to provide this extra power will result in instability of the CPU after only a few minutes of operation. See Section 2-5 for details on connecting the power supply.**

It is strongly recommended that you use a high quality power supply that meets ATX power supply Specification 2.02 or above. It must also be SSI compliant (info at <http://www.ssiforum.org/>). Additionally, in areas where noisy power transmission is present, you may choose to install a line filter to shield the computer from noise. It is recommended that you also install a power surge protector to help avoid problems caused by power surges.

## 1-7 Super I/O

The disk drive adapter functions of the Super I/O chip include a floppy disk drive controller that is compatible with industry standard 82077/765, a data separator, write pre-compensation circuitry, decode logic, data rate selection, a clock generator, drive interface control logic and interrupt and DMA logic. The wide range of functions integrated onto the Super I/O greatly reduces the number of components required for interfacing with floppy disk drives. The Super I/O supports 360 K, 720 K, 1.2 M, 1.44 M or 2.88 M disk drives and data transfer rates of 250 Kb/s, 500 Kb/s or 1 Mb/s. It also provides two high-speed, 16550 compatible serial communication ports (UARTs), one of which supports serial infrared communication. Each UART includes a 16-byte send/receive FIFO, a programmable baud rate generator, complete modem control capability and a processor interrupt system. Both UARTs provide legacy speed with baud rate of up to 115.2 Kbps as well as an advanced speed with baud rates of 250 K, 500 K, or 1 Mb/s, which support higher speed modems.

The Super I/O supports one PC-compatible printer port (SPP), Bi-directional Printer Port (BPP) , Enhanced Parallel Port (EPP) or Extended Capabilities Port (ECP).

The Super I/O provides functions that comply with ACPI (Advanced Configuration and Power Interface), which includes support of legacy and ACPI power management through an SMI or SCI function pin. It also features auto power management to reduce power consumption.

The IRQs, DMAs and I/O space resources of the Super I/O can flexibly adjust to meet ISA PnP requirements, which support ACPI and APM (Advanced Power Management).

## Chapter 2

# Installation

### 2-1 Static-Sensitive Devices

Electric-Static-Discharge (ESD) can damage electronic components. To prevent damage to your system board, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

#### Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the board from the anti-static bag.
- Handle the board by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the motherboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners and the motherboard.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. Do not install the onboard battery upside down to avoid possible explosion.

#### Unpacking

The motherboard is shipped in antistatic packaging to avoid static damage. When unpacking the board, make sure the person handling it is static protected.

## 2-2 PGA Processor and Heatsink Installation





*When handling the processor package, avoid placing direct pressure on the label area of the fan. Also, do not place the motherboard on a conductive surface, which can damage the BIOS battery and prevent the system from booting up.*

**IMPORTANT:** Always connect the power cord last and always remove it before adding, removing or changing any hardware components. Make sure that you install the processor into the CPU socket **before** you install the CPU heatsink. Note that for the X6DAL-G/X6DAL-TG you need to install the Xeon mounting plate under the board.

### Installing the CPU Mounting Plate

(\*Note: CPU Retention Brackets are pre-installed.)

1. Place the CPU retention bracket on top of the CPU mounting plate.
2. Install the CPU mounting plate below the retention bracket on the reverse side of the motherboard.
3. Properly place the CPU on top of the CPU socket. Align Pin 1 on the CPU with Pin 1 on the CPU socket.

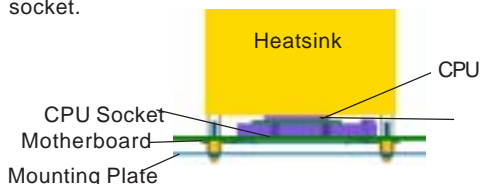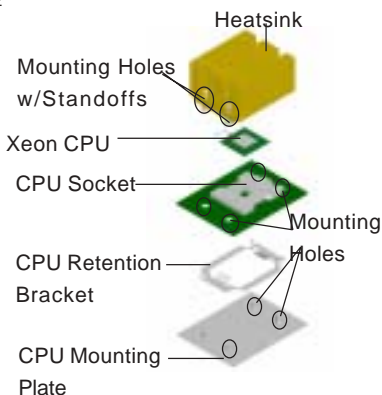

### CPU Installation

1. Lift the lever on the CPU socket: lift the lever completely as shown on the picture on the right; otherwise, you will damage the CPU socket when power is applied. (Install CPU1 first.)



Socket lever

2. Insert the CPU in the socket, making sure that pin 1 of the CPU aligns with pin 1 of the socket (both corners are marked with a triangle). When using only one CPU, install it into CPU socket #1 (Socket #2 is automatically disabled if only one CPU is used).



Pin1


3. Press the lever down until you hear the \*click\* so you can be sure that the CPU is securely installed in the CPU socket.



Socket lever in the locking Position

### **Heatsink Installation**

1. Do not apply any thermal grease to the heatsink or the CPU die; the required amount of thermal grease has already been applied.

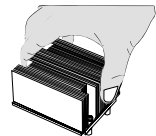

CEK Heatsink

2. Place the heatsink on top of the CPU so that the four mounting holes are aligned with those on the retention mechanism.




Screw#1 Screw#2

3. Screw in two diagonal screws (ie the #1 and the #2 screws) until just snug (-do not fully tighten the screws to avoid possible damage to the CPU.)

Screw#1

4. Finish the installation by fully tightening all four screws.

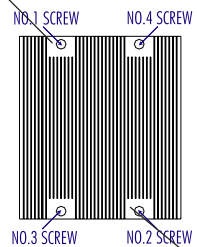


Screw#2

### **To Un-install the Heatsink**

**(Caution!** We do not recommend that the CPU or the heatsink be removed. However, if you do need to un-install the heatsink, please follow the instructions below to uninstall the heatsink to prevent damage done to the CPU or the CPU socket. )


1. Unscrew and remove the heatsink screws from the motherboard in the sequence as show in the second picture on the right.
2. Hold the heatsink as show in the picture on the right and gently wriggle the heatsink to loosen it from the CPU. (Do not use excessive force when wriggling the heatsink!!)
3. Once the CPU is loosened from the heatsink, remove the heatsink from the CPU socket.
4. Clean the surface of the CPU and the heatsink to get rid of the old thermal grease. Reapply the proper amount of thermal grease on the surface before you re-install the CPU and the heatsink.

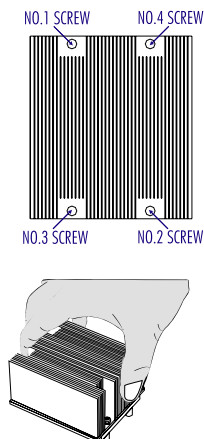

**Figure 2-1. PGA604 Socket: Empty and with Processor Installed**



**Warning!** Make sure you lift the lever completely when installing the CPU. If the lever is only partly raised, damage to the socket or CPU may result.

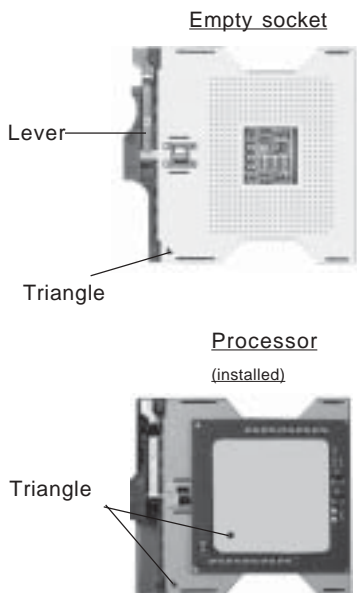



## Mounting the Motherboard in the Chassis

All motherboards have standard mounting holes to fit different types of chassis. Make sure the location of all the mounting holes for both the motherboard and the chassis match. Although a chassis may have both plastic and metal mounting fasteners, metal ones are highly recommended because they ground the motherboard to the chassis. Make sure the metal standoffs click in or are screwed in tightly. Then use a screwdriver to secure the motherboard onto the motherboard tray.

## 2-3 Installing DIMMs

**Note:** Check the Supermicro web site for recommended memory modules.

---

### **CAUTION**

Exercise extreme care when installing or removing DIMM modules to prevent any possible damage. Also note that the memory is interleaved to improve performance (see step 1).

---

### **DIMM Installation (See Figure 2-2)**

1. Insert the desired number of DIMMs into the memory slots, starting with DIMM #1A. The memory scheme is interleaved so you must install two modules at a time, beginning with DIMM #1A, then DIMM #1B, and so on.
2. Insert each DIMM module vertically into its slot. Pay attention to the notch along the bottom of the module to prevent inserting the DIMM module incorrectly.
3. Gently press down on the DIMM module until it snaps into place in the slot. Repeat for all modules (see step 1 above).


### **Memory Support**

The X6DAL-G/X6DAL-TG supports up to 12GB/24GB of Reg. ECC DDR 333/266 (PC2700/PC2100) memory. All motherboards were designed to support 4GB (PC2100) modules in each slot, but only the 2GB modules are tested. When using Reg. ECC DDR 333 (PC2700) memory, 4 pieces of double banked memory and 6 pieces of single banked memory are supported.

**Figure 2-2. Installing and Removing DIMMs**


**To Install:**

Insert module vertically and press down until it snaps into place. Pay attention to the alignment notch at the bottom.

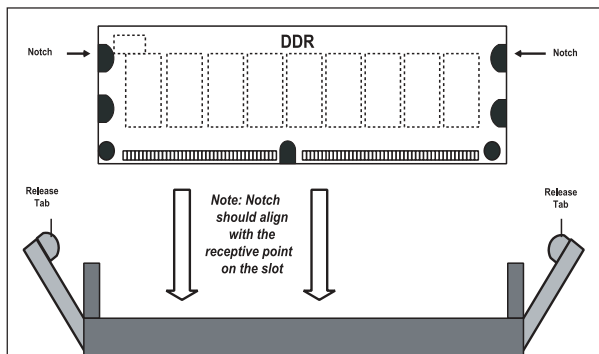


**To Remove:**

Use your thumbs to gently push near the edge of both ends of the module. This should release it from the slot.

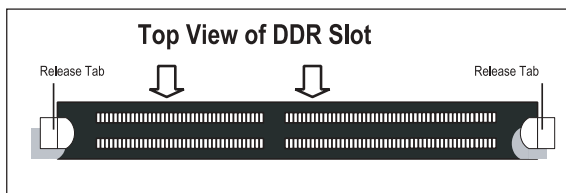

## 2-4 I/O Ports/Control Panel Connectors

The I/O ports are color coded in conformance with the PC 99 specification. See Figure 2-3 below for the colors and locations of the various I/O ports.

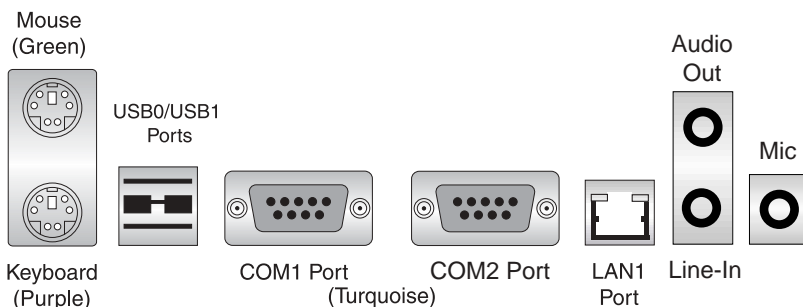


**Figure 2-3. I/O Port Locations and Definitions**

## Front Control Panel

JF1 contains header pins for various buttons and indicators that are normally located on a control panel at the front of the chassis. These connectors are designed specifically for use with Supermicro server chassis. See Figure 2-4 for the descriptions of the various control panel buttons and LED indicators. Refer to the following section for descriptions and pin definitions.

**Figure 2-4. JF1 Header Pins**

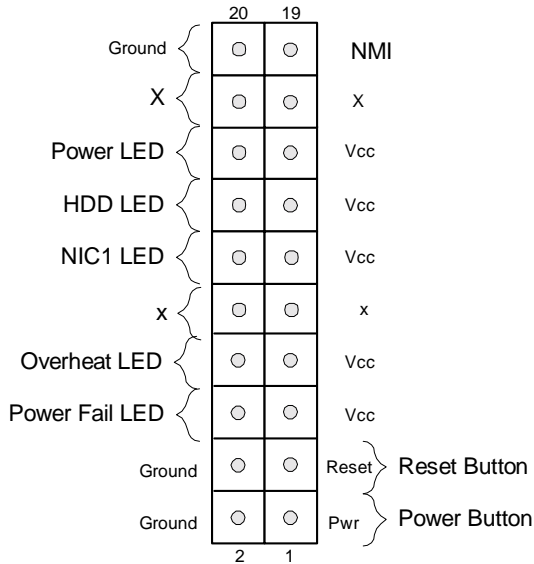

## 2-5 Connecting Cables

### ATX Power Connector

There are a 24-pin main power supply connector(PW1) and a 4-pin 12V PWR connector (PW3) on the board. (Both connections are required.) These power connectors meet the SSI EPS 12V specification. See the table on the right for pin definitions. For CPU PWR (PW2), please refer to the item listed below.

ATX Power Supply 24-pin Connector  
Pin Definitions (PW1)

Pin Number	Definition	Pin Number	Definition
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	COM	3	COM
16	PS_ON#	4	+5V
17	COM	5	COM
18	COM	6	+5V
19	COM	7	COM
20	Res(NC)	8	PWR_OK
21	+5V	9	5VSB
22	+5V	10	+12V
23	+5V	11	+12V
24	COM	12	+3.3V

Required

Connection

+12V 4-pin  
Connector  
(PW3)

Pins #	Definition
1 & 2	Ground
3 & 4	+12 V

### Processor Power Connector


In addition to the power connectors indicated above, the 12v 8-pin Processor connector at PW2 must also be connected to your power supply. See the table on the right for pin definitions.

Required

Connection

CPU 8-Pin PWR  
Connector (PW2)

Pins	Definition
1 thru 4	Ground
5 thru 8	+12v

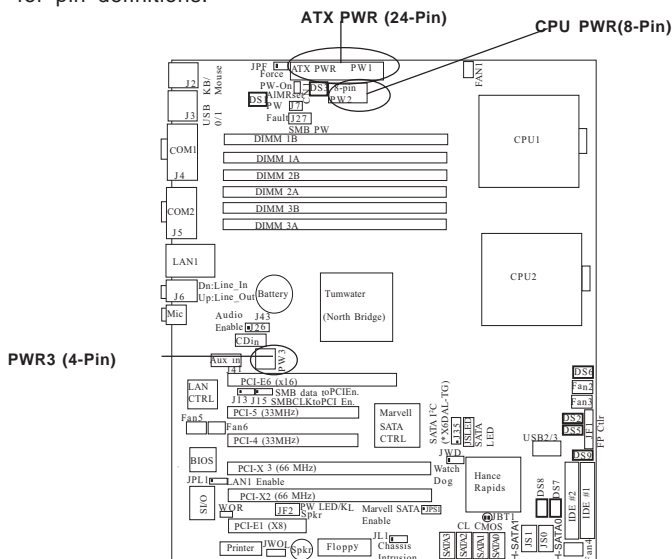

### NMI Button

The non-maskable interrupt button header is located on pins 19 and 20 of JF1. Refer to the table on the right for pin definitions.

**NMI Button Pin Definitions (JF1)**


Pin Number	Definition
19	Control
20	Ground

### Power LED

The Power LED connection is located on pins 15 and 16 of JF1. Refer to the table on the right for pin definitions.

**PWR\_LED Pin Definitions (JF1)**

Pin Number	Definition
15	Vcc
16	Control

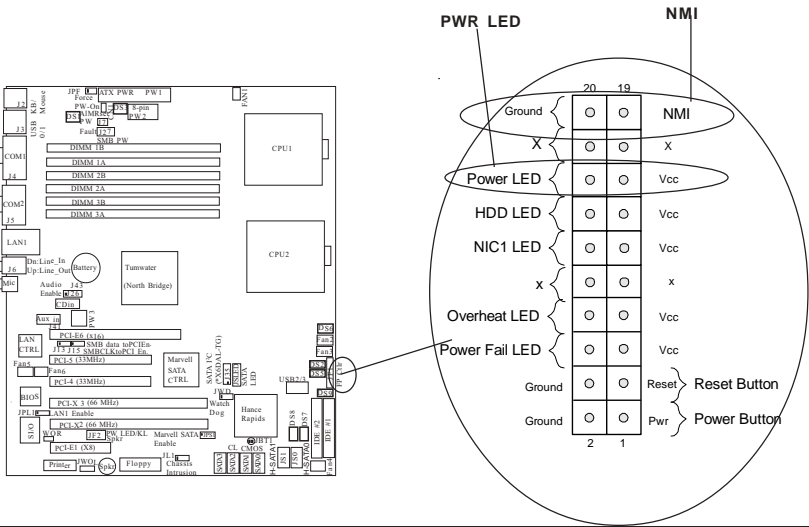

## HDD LED

The HDD LED connection is located on pins 13 and 14 of JF1. Attach the hard drive LED cable here to display disk activity (for any hard drives on the system, including SCSI, Serial ATA and IDE). See the table on the right for pin definitions.

**HDD LED Pin Definitions (JF1)**


Pin Number	Definition
13	Vcc
14	HD Active

## NIC1 LED Indicators

The NIC (Network Interface Controller) LED connections for the GLAN port1 is located on pins 11 and 12 of JF1. Attach the NIC LED cable to display network activity. Refer to the tables on the right for pin definitions.


**NIC1 LED Pin Definitions (JF1)**

Pin Number	Definition
11	Vcc
12	GND

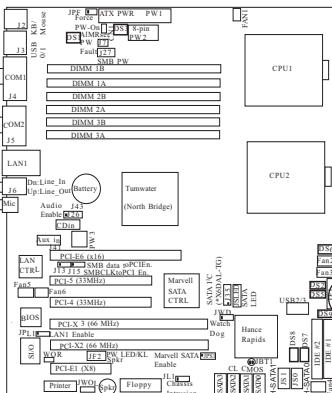

**HDD LED**

**NIC1 LED**

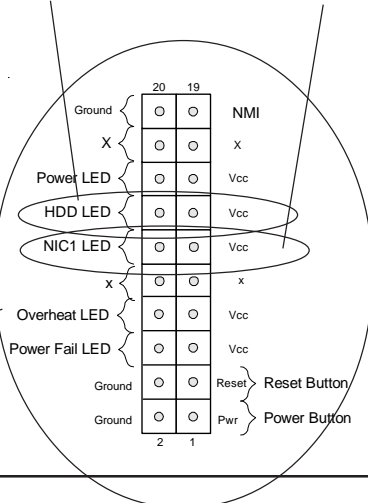

Overheat/Fan Fail LED

Connect an LED to the OH/Fan Fail connection on pins 7 and 8 of JF1 to provide advanced warning of chassis overheating. Refer to the table on the right for pin definitions.

Overheat/Fan Fail LED Pin Definitions (JF1)

Pin Number	Definition
7	Vcc
8	GND

Overheat/Fan Fail LED


State	Message
Solid	Overheat
Blink	Fan Fail

Power Fail LED

The Power Fail LED connection is located on pins 5 and 6 of JF1. Refer to the table on the right for pin definitions.

Power Fail LED Pin Definitions (JF1)

Pin Number	Definition
5	Vcc
6	GND

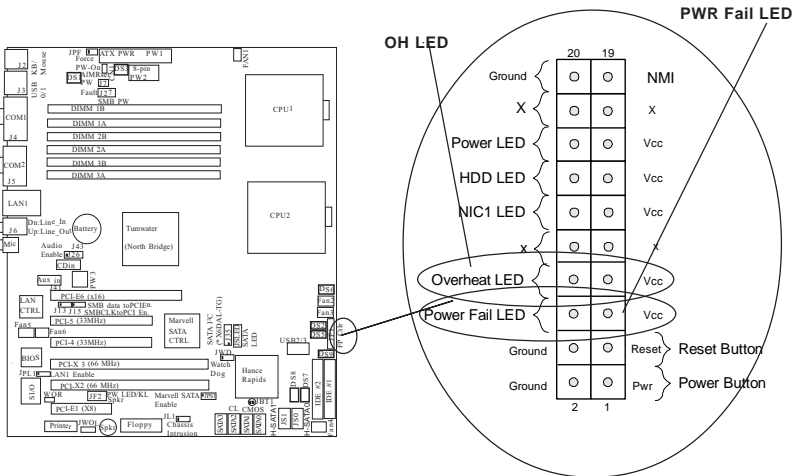

Reset Button

The Reset Button connection is located on pins 3 and 4 of JF1. Attach it to the hardware reset switch on the computer case. Refer to the table on the right for pin definitions.

Reset Pin Definitions (JF1)



Pin Number	Definition
3	Reset
4	Ground

Power Button

The Power Button connection is located on pins 1 and 2 of JF1. Momentarily contacting both pins will power on/off the system. To turn off the power when set to suspend mode, depress the button for at least 4 seconds. Refer to the table on the right for pin definitions.

Power Button Connector Pin Definitions (JF1)

Pin Number	Definition
1	PW_ON
2	Ground

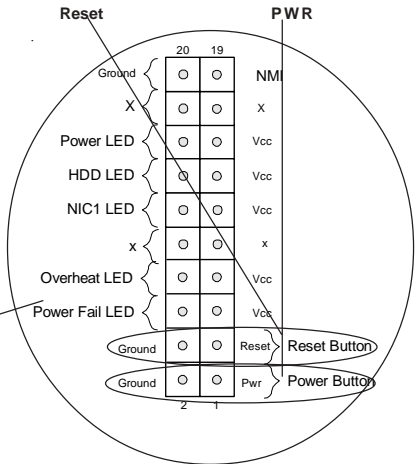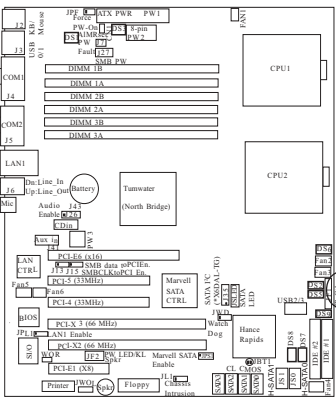



### Chassis Intrusion

A Chassis Intrusion header is located at JL1. Attach the appropriate cable to inform you of a chassis intrusion.

Chassis Intrusion  
Pin Definitions

Pin Number	Definition
1	Intrusion Input
2	Ground

### Universal Serial Bus (USB)

There are two Universal Serial Bus ports(USB 0/1) located on the I/O panel and additional two USB ports(USB 2/3) next to the IDE2 on the motherboard. These two FP USB ports can be used to provide front side chassis access (cables not included). See the tables on the right for pin definitions.


USB Pin Definition

USB 0/1 (Back Panel USB)

Pin#	Definition
1	+5V
2	PO-
3	PO+
4	Ground

USB 2/3 (Front Panel USB)

Pin Number	Definition	Pin Number	Definition
1	+5V	2	+5V
3	PO-	4	PO-
5	PO+	6	PO+
7	Ground	8	Ground
		10	Ground

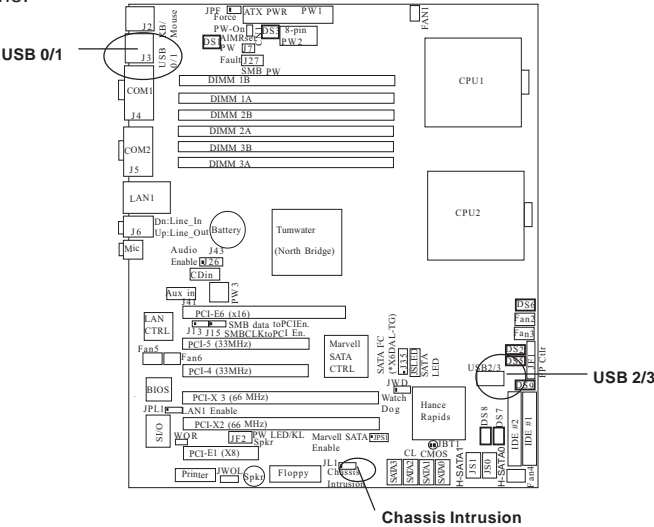

## ATX PS/2 Keyboard and PS/2 Mouse Ports

The ATX PS/2 keyboard and the PS/2 mouse are located at J2. See the table on the right for pin definitions. (The mouse port is above the keyboard port. See the table on the right for pin definitions.)

**PS/2 Keyboard and Mouse Port Pin Definitions (J2)**

Pin Number	Definition
1	Data
2	NC
3	Ground
4	VCC
5	Clock
6	NC


## Fan Headers

There are six fan headers (Fan 1 to Fan 6) on the X6DAL-G/TG. See the table on the right for pin definitions. (\*Note: These fan headers are 4-pin fans. Pins#1-#3 of the fan headers are backward compatible with the traditional 3-pin fans.) (\*The onboard fan speed is controlled by Thermal Management via BIOS--Hardware Monitor in the Advanced Setting. Note: Default: Disabled, When using Thermal Management setting, please use all 3-pin fans or all 4-pin fans on the motherboard. Please do not use 3-pin fans and 4-pin fans on the same board.)

**4-pin Fan Header Pin Definitions (CPU and Chassis Fans)**

Pin#	Definition
1	Ground (black)
2	+12V (red)
3	Tachometer
4	PWM_Control

Caution: These fan headers use DC power.

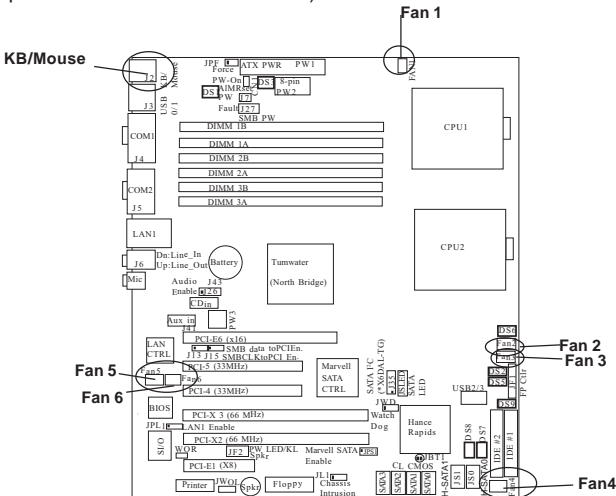



## Wake-On-LAN

The Wake-On-LAN header(JWOL) is designated WOL on the motherboard. See the table on the right for pin definitions. You must enable the LAN Wake-Up setting in BIOS to use this function. (You must also have a LAN card with a Wake-On-LAN connector and cable to use this feature.)


**Wake-On-LAN Pin Definitions (JWOL)**

Pin Number	Definition
1	+5V Standby
2	Ground
3	Wake-up

## GLAN (Giga-bit Ethernet Port)



A G-bit Ethernet port is located beside the COM2 port on the IO backplane. This port accepts RJ45 type cables.

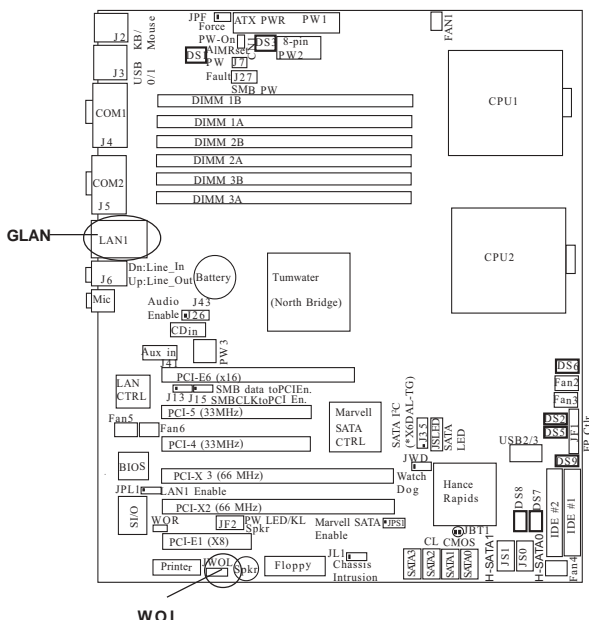

## Power Fault

Connect a cable from your power supply to the Power Fault header (J7) to provide warning of power supply failure. This warning signal is passed through the PWR\_LED pin to indicate of a power failure on the chassis. See the table on the right for pin definitions.

## Power Fault Pin Definitions

Pin Number	Definition
1	P/S 1 Fail Signal
2	P/S 2 Fail Signal
3	P/S 3 Fail Signal
4	Reset (from MB)


**Note:** This feature is only available when using redundant Supermicro power supplies.

**SATA SMB (I<sup>2</sup>C)(\*X6DAL-TG only)**

A Serial ATA System Management Bus header is located at J35. Connect the appropriate cable here to utilize SATA SMB on your system.

### SATA SMB (J35) Pin Definitions

Pin Number	Definition
1	Data
2	Ground
3	Clock

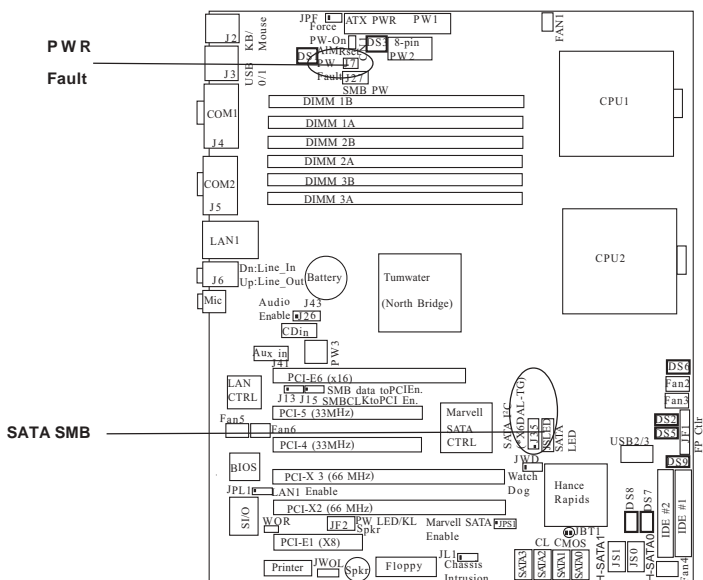

# SMB Power (I<sup>2</sup>C) Connector

I<sup>2</sup>C Connector (J27), located between the Alarm Reset Header and the PWR Fault Header, monitors the status of PWR Supply, Fan and system temperature.

SMB PWR  
Pin Definitions (J27)

Pin #	Definition
1	Clock
2	SMB Data
3	N/A
4	N/A
5	N/A

# CD-In Header


There is a 4-pin CD header on the motherboard. This allows you to use the onboard sound for audio CD playback. Connect the audio cable from your CD drive to the header. See the tables at right for pin definitions.

Audio CD Header Pin Definitions  
(CD1)

Pin Number	Definition
1	Left Stereo Signal
2	Ground
3	Ground
4	Right Stereo Signal

Audio CD Header Pin Definitions  
(CD2)

Pin Number	Definition
1	Right Stereo Signal
2	Ground
3	Left Stereo Signal
4	Ground

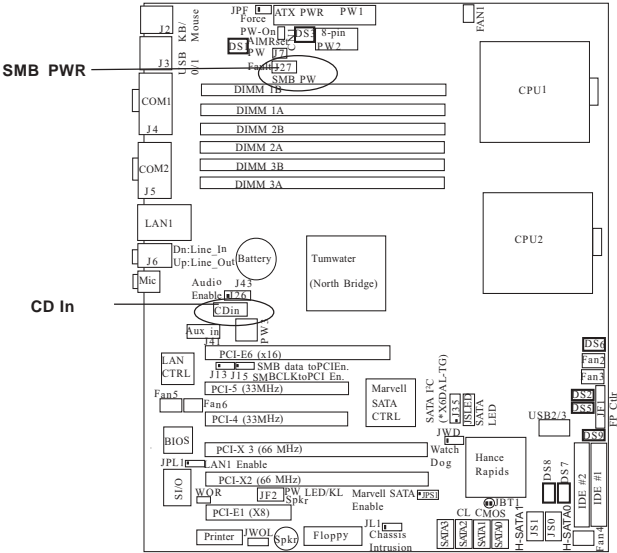

## AC 97/AUX In/CD In

AC'97 provides high quality onboard audio. The X6DAL-G/X6DAL-TG features 6-channel sound for front L&R, rear L&R, center and subwoofer speakers. This feature is activated with the Advanced software (on the CD-ROM included with your motherboard). Sound is then output through the Line In, Line Out and MIC jacks (see at right). Activate AC 97 with the "AC 97 Audio" setting in the Advanced Chipset Features section of BIOS. In addition, there are also Aux In and CD In Connectors on the motherboard.



**Blue:Line In (surround L/R)**

**Green: Line Out (Front L/R)**




**Pink: MIC In (Center/  
subwoofer)**

### Speaker/Power LED/ Keylock

On the JF2 header, pins 1/3/5/7 are for the Speaker, and Pins 2/4/6 are for the Power LED and pins 8/9 are for Keylock. See the table on the right for speaker pin definitions. **Note:** The speaker connector pins are for use with an external speaker. If you wish to use the onboard speaker, you should close pins 5-7 with a jumper.

### Speaker Connector Pin Definitions (JF2)

Pin Number	Function	Definition
1	+ Key	Red wire, Speaker data
3		No connection
5		Key
7		Speaker data

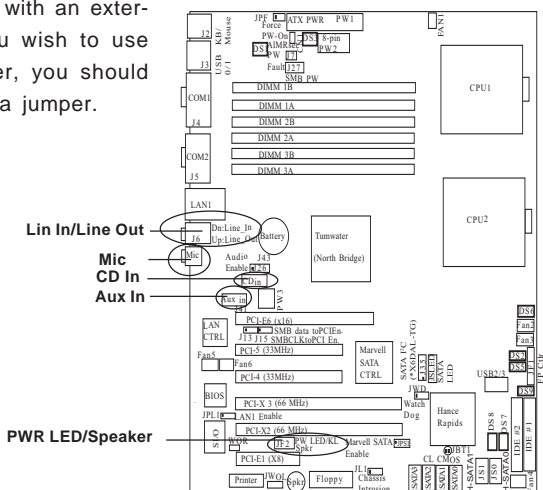


## 2-6 Jumper Settings

### Explanation of Jumpers

To modify the operation of the motherboard, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. See the motherboard layout pages for jumper locations.

**Note:** On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

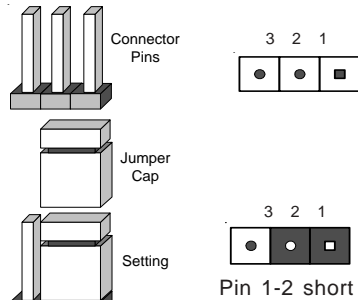


### LAN Enable/Disable

JPL1 enables or disable the Giga-bit LAN port on the motherboard. See the table on the right for jumper settings. The default setting is enabled.

GLAN  
Enable/Disable  
Jumper Settings  
(JPL1)

Jumper Position	Definition
Pins 1-2	Enabled
Pins 2-3	Disabled

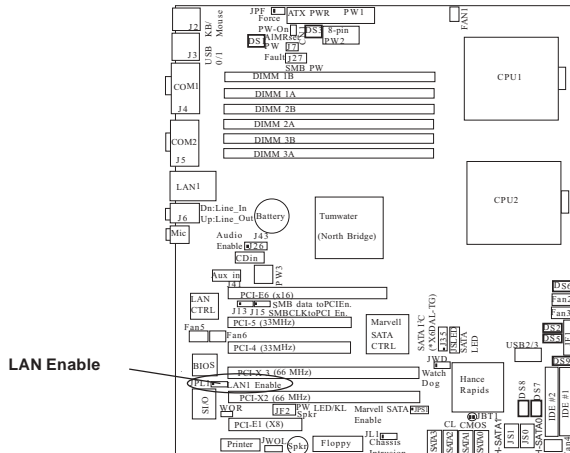



Alarm Reset

The system will notify you in the event of a power supply failure. This feature assumes that Super-micro redundant power supply units are installed in the chassis. If you only have a single power supply installed, you should disable this (the default setting) with (CN1) to prevent false alarms. See the table on the right for jumper settings.

Alarm Reset Jumper Settings


Jumper Position	Definition
Open	Enabled
Closed	Disabled

Serial ATA Enable/Disable (X6DAL-TG)

Jumpers JPS1 allows you to enable or disable the Serial ATA headers. The default setting is pins 1-2 to enable all four headers. See the table on the right for jumper settings.

Serial ATA Enable/Disable Jumper Settings (JPS1) (\*For Marvell's SATA2 Controller)

Jumper Position	Definition
Pins 1-2	Enabled
Pins 2-3	Disabled

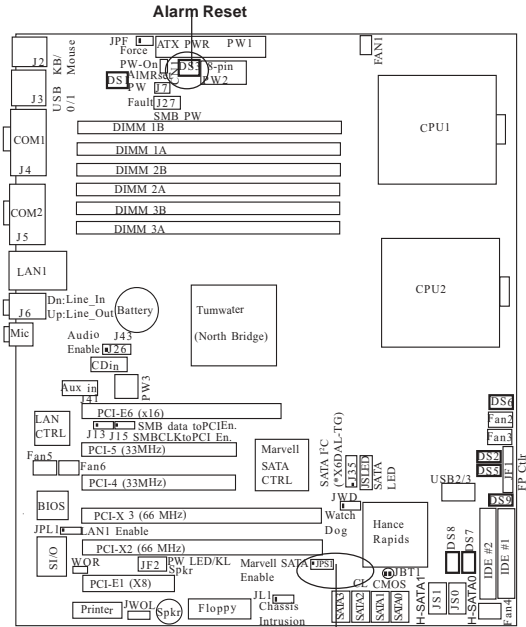

SATA Enable



### Audio Enable/Disable

J26 enables or disables the Audio Connector on the motherboard. See the table on the right for jumper settings. The default setting is enabled.

### Audio Enable/Disable Jumper Settings (J26)


Jumper Position	Definition
Pins 1-2	Enabled
Pins 2-3	Disabled

### Force-Power-On Enable/ Disable

Jumper JPF<sub>1</sub> allows you to enable or disable the function of Force-Power-On. If enabled, the power will always stay on automatically. If this function disabled, the user needs to press the power button to power on the system.

Force Power On  
(JPF)

Jumper Position	Definition
Off	Normal
On	Force On

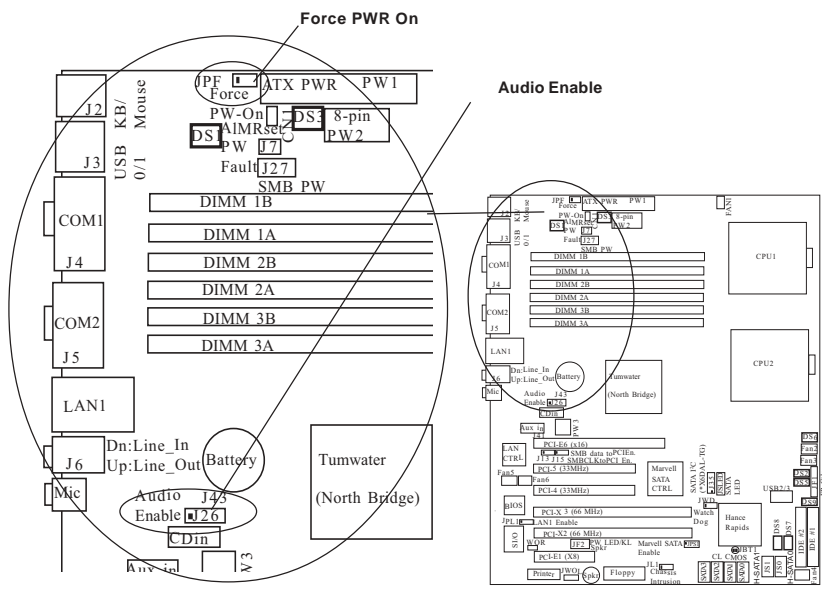

## 2-7 Onboard Indicators

### GLAN LEDs

The Gigabit Ethernet LAN port (located beside the COM Port2) has two LEDs. The yellow LED indicates activity while the other LED may be green, orange or off to indicate the speed of the connection. See the table at right for the functions associated with the second LED.

G-bit LAN Right LED Indicator


LED Color	Definition
Off	No Connection
Green	100 MHz
Orange	1 GHz

### SATA LED Header

A Serial ATA LED header is located at JSLED. See the table on the right for speaker pin definitions.

SATA LED Pin Definitions (JSLED)

Pin#	Definition
1	Marvell SATA HD0 Active LED
2	Marvell SATA HD1 Active LED
3	Marvell SATA HD2 Active LED
4	Marvell SATA HD3 Active LED
5	All Marvell SATA Ports Active LED
6	Hance Rapid's SATA Active LED
7	Hance Rapid's SATA Active LED

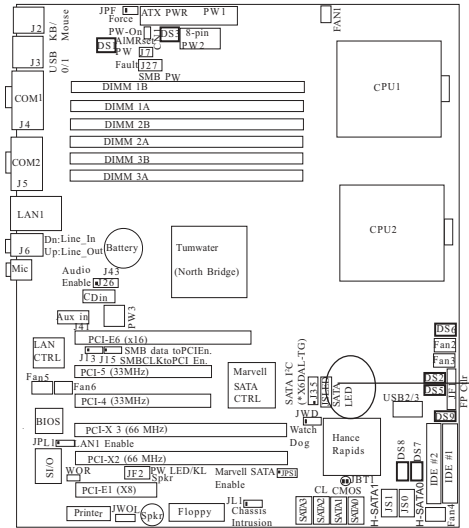

SATA LED

**Onboard LED Indicators  
(DS1-DS8)**

In addition to the LAN LED and SATA Header, there are other LED indicators (DS1-DS3, DS5-DS8 ) on the X6DAL-G/TG. See the table on the right for speaker pin definitions. (\*Note: Please refer to Appendix A for DS7 and DS8 LED POST Codes.)

**On board LED Pin Definitions**


DS#	Definition
DS1	CPU PWR good or CPU +12V PWR Cable must be connected.
DS2	CPU2 VRM Overheat
DS3	CPU1 VRM Overheat
DS5	PWR LED
DS6	CPU Overheat
DS7-8	POST LED

**System Alert LED  
Indicators (DS9)**

In addition to the LED indicators listed above, there is a System Alert LED indicator (DS9) on the X6DAL-G/TG. See the table on the right for speaker pin definitions.

**System Alert LED (DS9) Pin Definitions**

DS9	Definition
Green	System: On & OK
Yellow	System: Off, PWR Cable Connected
Red	PWR or CPU Failure

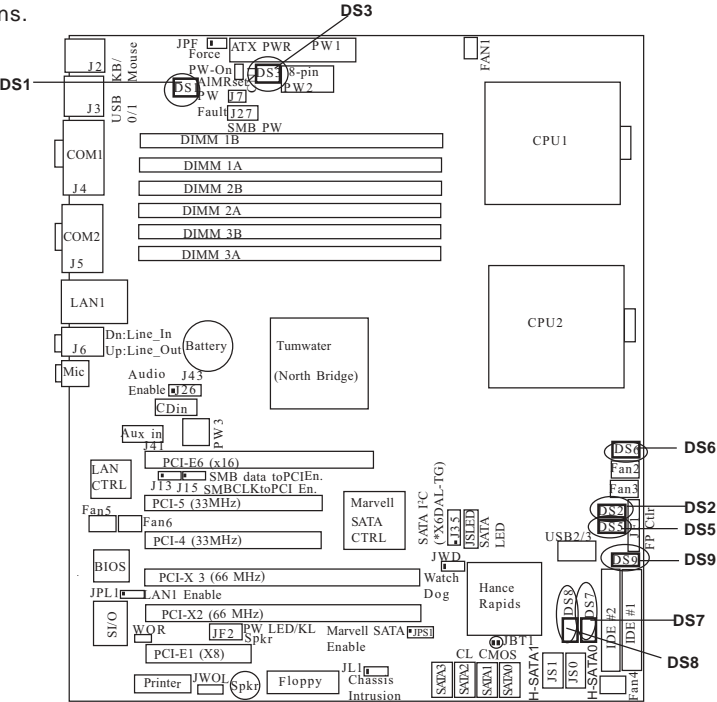




## Floppy Connector

The floppy connector is located on J24. See the table below for pin definitions.

Floppy Connector Pin Definitions (J24)

Pin Number	Function	Pin Number	Function
1	GND	2	FDHDIN
3	GND	4	Reserved
5	Key	6	FDEDIN
7	GND	8	Index-
9	GND	10	Motor Enable
11	GND	12	Drive Select B-
13	GND	14	Drive Select A-
15	GND	16	Motor Enable
17	GND	18	DIR-
19	GND	20	STEP-
21	GND	22	Write Data-
23	GND	24	Write Gate-
25	GND	26	Track 00-
27	GND	28	Write Protect-
29	GND	30	Read Data-
31	GND	32	Side 1 Select-
33	GND	34	Diskette

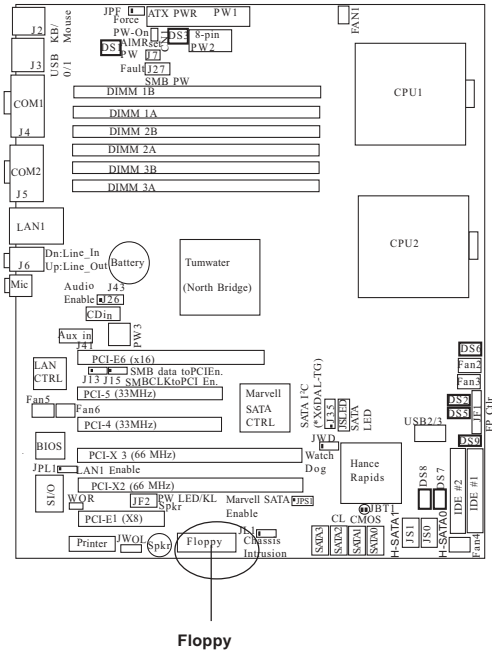


## IDE Connectors

The IDE Connectors are located on J44 (IDE1) and J38 (IDE 2), You do not need to configure jumpers for these connectors. See the table on the right for pin definitions.

IDE Connector Pin Definitions  
(J44, J38)

Pin Number	Function	Pin Number	Function
1	Reset IDE	2	GND
3	Host Data 7	4	Host Data 8
5	Host Data 6	6	Host Data 9
7	Host Data 5	8	Host Data 10
9	Host Data 4	10	Host Data 11
11	Host Data 3	12	Host Data 12
13	Host Data 2	14	Host Data 13
15	Host Data 1	16	Host Data 14
17	Host Data 0	18	Host Data 15
19	GND	20	Key
21	DRQ3	22	GND
23	I/O Write-	24	GND
25	I/O Read-	26	GND
27	IOCHRDY	28	BALE
29	DACK3-	30	GND
31	IRQ14	32	IOCS16-
33	Addr 1	34	GND
35	Addr 0	36	Addr 2
37	Chip Select 0	38	Chip Select 1-
39	Activity	40	GND

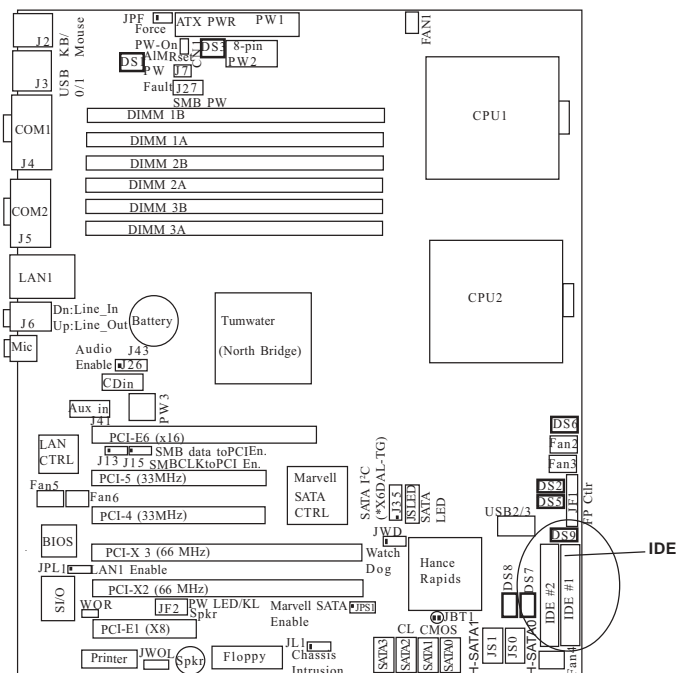



## Chapter 3

# Troubleshooting

### 3-1 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the 'Technical Support Procedures' and/or 'Returning Merchandise for Service' section(s) in this chapter.

**Note: Always disconnect the power cord before adding, changing or installing any hardware components.**

#### Before Power On

1. Make sure no short circuits exist between the motherboard and chassis.
2. Disconnect all ribbon/wire cables from the motherboard, including those for the keyboard and mouse.
3. Remove all add-on cards.
4. Install one CPU in socket#1 (making sure it is fully seated) and connect the chassis speaker and the power LED to the motherboard. (Check all jumper settings as well.)
5. Use only the correct type of onboard CMOS battery as recommended by the Manufacturer. Do not install the onboard battery upside down to avoid possible explosion.

#### No Power

1. Make sure no short circuits exist between the motherboard and the chassis.
2. Verify that all jumpers are set to their default positions.
3. Check that the 115V/230V switch on the power supply is properly set.
4. Turn the power switch on and off to test the system.
5. The battery on your motherboard may be old. Check to verify that it still supplies ~3VDC. If it does not, replace it with a new one.

#### No Video

1. If the power is on but you have no video, remove all the add-on cards and cables.
2. Use the speaker to determine if any beep codes exist. Refer to the Appendix for details on beep codes.

---

### **NOTE**

If you are a system integrator, VAR or OEM, a POST diagnostics card is recommended. For I/O port 80h codes, refer to App. B.

---

## **Memory Errors**

1. Make sure the DIMM modules are properly and fully installed.
2. Determine if different speeds of DIMMs have been installed and verify that the BIOS setup is configured for the fastest speed of RAM used. It is recommended to use the same RAM speed for all DIMMs in the system.
3. Make sure you are using the correct type of Registered, ECC DDR 333/266 (PC2700/PC2100) SDRAM (\*recommended by the manufacturer.)
4. Check for bad DIMM modules or slots by swapping a single module between two slots and noting the results.
5. Make sure all memory modules are fully seated in their slots. As an interleaved memory scheme is used, you must install two modules at a time, beginning with DIMM #1A, then DIMM #1B, and so on (see Section 2-3).
6. Check the position of the 115V/230V switch on the power supply.

## **Losing the System's Setup Configuration**

1. Ensure that you are using a high quality power supply. A poor quality power supply may cause the system to lose the CMOS setup information. Refer to Section 1-6 for details on recommended power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies ~3VDC. If it does not, replace it with a new one.
3. If the above steps do not fix the Setup Configuration problem, contact your vendor for repairs.

## **3-2 Technical Support Procedures**

Before contacting Technical Support, please take the following steps. Also, note that as a motherboard manufacturer, Super Micro does not sell directly to end-users, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problem(s) with the specific system configuration that was sold to you.

1. Please go through the 'Troubleshooting Procedures' and 'Frequently Asked Question' (FAQ) sections in this chapter or see the FAQs on our web site (<http://www.supermicro.com/support/faqs/>) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our web site at (<http://www.supermicro.com/support/bios/>).

**Note: Not all BIOS can be flashed depending on the modifications to the boot block code.**

3. *If you still cannot resolve the problem, include the following information when contacting Super Micro for technical support:*

- Motherboard model and PCB revision number
- BIOS release date/version (this can be seen on the initial display when your system first boots up)
- System configuration

An example of a Technical Support form is on our web site at (<http://www.supermicro.com/support/contact.cfm>).

4. Distributors: For immediate assistance, please have your account number ready when placing a call to our technical support department. We can be reached by e-mail at [support@supermicro.com](mailto:support@supermicro.com), by phone at: (408) 503-8000, option 2, or by fax at (408)503-8019.

### 3-3 Frequently Asked Questions

**Question:** What are the various types of memory that my motherboard can support?

**Answer:** The X6DAL-G/X6DAL-TG has six 184-pin DIMM slots that support registered ECC DDR 333/266 (PC2700/2100) SDRAM modules. It is strongly recommended that you do not mix memory modules of different speeds and sizes.

**Question:** How do I update my BIOS?

**Answer:** It is recommended that you **do not** upgrade your BIOS if you are experiencing no problems with your system. Updated BIOS files are located on our web site at <http://www.supermicro.com>. Please check our BIOS warning message and the information on how to update your BIOS on our web site. Also, check the current BIOS revision and make sure it is newer than your BIOS before downloading.

**Question:** What's on the CD that came with my motherboard?

**Answer:** The supplied compact disc has quite a few drivers and programs that will greatly enhance your system. We recommend that you review the CD and install the applications you need. Applications on the CD include chipset drivers for Windows and security and audio drivers. Note: The CD is a bootable disc and can be used to create driver diskettes.

### **3-4 Returning Merchandise for Service**

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

## Chapter 4

# AMIBIOS

### 4-1 Introduction

This chapter describes the AMIBIOS for the X6DAL-TG/X6DAL-G. The AMI ROM BIOS is stored in a Flash EEPROM and can be easily upgraded using a floppy disk-based program. This chapter describes the basic navigation of the AMI BIOS Setup Utility setup screens.

#### Starting the BIOS Setup Utility

To enter the AMI BIOS Setup Utility screens, hit the <Delete> key while the system is booting-up.

(\*Note: In most cases, the <Delete> key is used to invoke the AMI BIOS setup screen. There are a few cases when other keys are used, such as <F1>, <F2>, and so on.)

Each main BIOS menu option is described in this user's guide. The Main BIOS setup menu screen has two main frames. The left frame displays all the options that can be configured. "Grayed-out" options cannot be configured. Options in blue can be configured by the user. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When an option is selected in the left frame, it is highlighted in white. Often a text message will accompany it.

(\*Note: The AMI BIOS has default text messages built in. Supermicro retains the option to include, omit, or change any of these text messages.)

The AMI BIOS setup/utility uses a key-based navigation system called hot keys. Most of the AMI BIOS setup utility hot keys can be used at any time during the setup navigation process. These keys include <F1>, <F10>, <Enter>, <ESC>, <Arrow> keys, and so on.

(\*Note: Options printed in **Bold** are default settings. )

## 4-2 Main Setup

When you first enter the AMI BIOS Setup Utility, you will enter the Main setup screen. You can always return to the Main setup screen by selecting the **Main** tab on the top of the screen. The Main BIOS Setup screen is shown below.



When you select the Main Setup, the following items will be automatically displayed:

**System Overview:** The following BIOS information will be displayed:

### AMI BIOS

Version  
Built Date  
ID

### **Processors**

When you select this option, the AMI BIOS will automatically display the status of processors as shown in the screen below:

Type  
Speed  
Count

## System Memory

This option allows the AMI BIOS to display the status of memory installed in the system.

### Size


This option allows the AMI BIOS to display the size of memory installed in the system.

## System Time/System Date

Use this option to change the system time and date. Highlight *System Time* or *System Date* using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in DAY/MM/DD/YY format. The time is entered in HH:MM:SS format. (\***Note:** The time is in 24-hour format. For example, 5:30 A.M. appears as 05:30:00, and 5:30P.M. as 17:30:00.)

## 4-3 Advanced Settings

The Advanced Settings screen and sub menus are listed below:

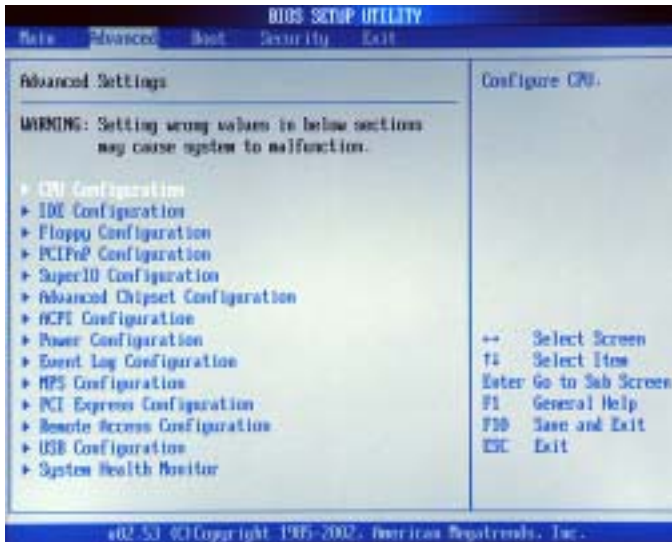

### Warning

When you first enter the Advanced Setup screen, the Setup Warning will be displayed. Please follow the instruction and set the correct value for each item to prevent the system from malfunctioning.

## ►CPU Configuration Sub Menu

### Configure Advanced CPU Settings

This option allows the user to configure Advanced CPU settings for the processor(s) installed in the system.

#### Ratio CMOS Setting

This option allows the user to set the ratio between the CPU Core Clock and the FSB Frequency. (\*Note: if an invalid ratio is entered, AMIBIOS will restore the setting to the previous state.)

#### VID CMOS Setting

This option sets the VID setting for the processor(s).

### Max CPUID Value Limit

This feature allows the user to set the maximum CPU ID value. Enable this function to boot legacy OS that cannot support processors with extended CPUID functions. The options are Enabled, and **Disabled**.


### Hyper-Threading

This setting allows you to **Enable** or Disable the function of hyper-threading. Enabling hyper-threading results in increased CPU performance.



## ►IDE Configuration Sub Menu

The screen for the Primary IDE Master is shown below:

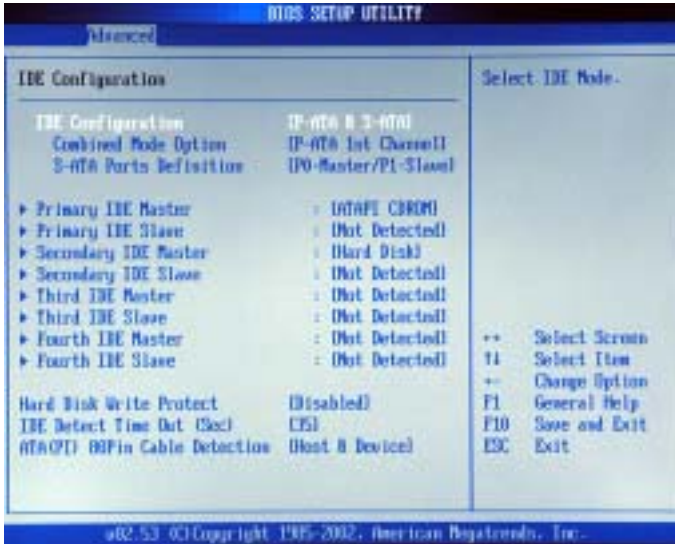

When you select this Sub Menu, the AMI BIOS automatically displays the status of the following items:

### Onboard PCI IDE Operate Mode

This feature allows the user to set the Onboard PCI IDE Operation Mode. The options are: Native Mode and **Legacy Mode**. (\*Please refer to Addendum D for information on Legacy Mode and Native Mode.)

### IDE Configuration

This feature allows the user to set the IDE mode. The options are: Disabled, P-ATA (Parallel ATA) Only, S-ATA (Serial ATA) Only, and **P-ATA & S-ATA**. (\*Please refer to Addendum D for Parallel ATA and Serial ATA information.)

#### P-ATA & S-ATA

##### Combined Mode Operation

This feature allows the user to select the IDE Combined Mode. The options are: Disabled, P-ATA (Parallel ATA) 1ST Channel and **S-ATA (Serial ATA 1st Channel)**.

### **S-ATA Ports Definition**

This feature allows the user to configure Serial ATA Ports. The options are: **P0-Master/P1-Slave**, P0-Slave/P1-Master.

#### **P-ATA Only**

### **S-ATA Running Enhanced Mode**

Select Yes if you want the function of Serial ATA Enhanced Mode to be enabled at all times. Options are **Yes** and No.

### **P-ATA Channel Selection**

This feature allows the user to select which channel to set the Parallel ATA Mode. The options are: Primary, Secondary or **Both**.

### **S-ATA Ports Definition**

This feature allows the user to configure Serial ATA Ports. The options are: **P0-3rd/P1-4th**, P0-4th/P1-3rd.

### **Configuring S-ATA as RAID**

Select Yes to configure Serial ATA as RAID. The options are Yes, and **No**.

#### **S-ATA Only**

### **S-ATA Ports Definition**

This feature allows the user to configure Serial ATA Ports. The options are: **P0-1st/P1-2nd**, P0-2nd/P1-1st.

### **Primary IDE Master/Slave, Secondary IDE Master/Slave, Third IDE Master/Slave, Fourth IDE Master/Slave Sub Menu**

From the Advanced Setup screen, press <Enter> to access this sub menu for the primary, secondary, third and fourth IDE master and slave drives. Use this screen to select options for the Primary and Secondary IDE drives. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option.

### **Type**

Select the type of device connected to the system. The options are Not Installed, **Auto**, CDROM and ARMD.

## **LBA/Large Mode**

LBA (Logical Block Addressing) is a method of addressing data on a disk drive. In the LBA mode, the maximum drive capacity is 137 GB. For drive capacities over 137 GB, your system must be equipped with 48-bit LBA mode addressing. If not, contact your manufacturer or install an ATA/133 IDE controller card that supports 48-bit LBA mode. The options are Disabled or **Auto**.

## **Block (Multi-Sector Transfer)**

Block mode boosts IDE drive performance by increasing the amount of data transferred. Only 512 bytes of data can be transferred per interrupt if block mode is not used. Block mode allows transfers of up to 64 KB per interrupt. Select "Disabled" to allow the data to be transferred from and to the device one sector at a time. Select "Auto" to allow the data transfer from and to the device occur multiple sectors at a time if the device supports it. The options are **Auto** and Disabled.

## **PIO Mode**

IDE PIO (Programmable I/O) mode programs timing cycles between the IDE drive and the programmable IDE controller. As the PIO mode increases, the cycle time decreases. The options are **Auto**, 0, 1, 2, 3, and 4. Select Auto to allow the AMI BIOS to auto detect the PIO mode. Use this value if the IDE disk drive support cannot be determined. Select 0 to allow the AMI BIOS to use PIO mode 0. It has a data transfer rate of 3.3 MBs. Select 1 to allow the AMI BIOS to use PIO mode 1. It has a data transfer rate of 5.2 MBs. Select 2 to allow the AMI BIOS to use PIO mode 2. It has a data transfer rate of 8.3 MBs. Select 3 to allow the AMI BIOS to use PIO mode 3. It has a data transfer rate of 11.1 MBs. Select 4 to allow the AMI BIOS to use PIO mode 4. It has a data transfer rate of 16.6 MBs. This setting generally works with all hard disk drives manufactured after 1999. For other disk drives, such as IDE CD-ROM drives, check the specifications of the drive.

## **DMA Mode**

Select Auto to allow the BIOS to auto detect the DMA mode. Use this value if the IDE disk drive support cannot be determined. Select SWDMA0

to allow the BIOS to use Single Word DMA mode 0. It has a data transfer rate of 2.1 MBs. Select SWDMA1 to allow the BIOS to use Single Word DMA mode 1. It has a data transfer rate of 4.2 MBs. Select SWDMA2 to allow the BIOS to use Single Word DMA mode 2. It has a data transfer rate of 8.3 MBs. Select MWDMA0 to allow the BIOS to use Multi Word DMA mode 0. It has a data transfer rate of 4.2 MBs. Select MWDMA1 to allow the BIOS to use Multi Word DMA mode 1. It has a data transfer rate of 13.3 MBs. Select MWDMA2 to allow the BIOS to use Multi-Word DMA mode 2. It has a data transfer rate of 16.6 MBs. Select UDMA0 to allow the BIOS to use Ultra DMA mode 0. It has a data transfer rate of 16.6 MBs. It has the same transfer rate as PIO mode 4 and Multi Word DMA mode 2. Select UDMA1 to allow the BIOS to use Ultra DMA mode 1. It has a data transfer rate of 25 MBs. Select UDMA2 to allow the BIOS to use Ultra DMA mode 2. It has a data transfer rate of 33.3 MBs. Select UDMA3 to allow the BIOS to use Ultra DMA mode 3. It has a data transfer rate of 66.6 MBs. Select UDMA4 to allow the BIOS to use Ultra DMA mode 4 . It has a data transfer rate of 100 MBs. The options are **Auto**, SWDMA<sub>n</sub>, MWDMA<sub>n</sub>, and UDMA<sub>n</sub>.

### **S.M.A.R.T. For Hard disk drives**

Self-Monitoring Analysis and Reporting Technology (SMART) can help predict impending drive failures. Select "Auto" to allow the BIOS to auto detect hard disk drive support. Select "Disabled" to prevent the AMI BIOS from using the S.M.A.R.T. Select "Enabled" to allow the AMI BIOS to use the S.M.A.R.T. to support hard drive disk. The options are Disabled, Enabled, and **Auto**.

### **32Bit Data Transfer**

Select "Enabled" to activate the function of 32-Bit data transfer. Select "Disabled" to deactivate the function. The options are Enabled and **Disabled**.

### **Hard Disk Write Protect**

Select Enabled to enable the function of Hard Disk Write Protect to prevent data from being written to HDD. The options are Enabled or **Disabled**.

### **IDE Detect Time Out**

This feature allows the user to set the time-out value for detecting ATA, ATA PI devices installed in the system. The options are 0 (sec), 5, Mode 1.0, 15, 20, 25, 30, and **35**.

### ATA(PI) 80Pin Cable Detection

This feature allows the AMI BIOS to auto-detect 80Pin ATA(PI) Cable. The options are: **Host & Device**, Host and Device.

### ►Floppy Configuration

This option allows the user to configure the settings for the Floppy Drives installed in the system.

#### Floppy A

Move the cursor to these fields via up and down <arrow> keys to select the floppy type. The options are Disabled, 360 KB 5 1/4", 1.2 MB 5 1/4", 720 KB 3 1/2", 1.44 MB 3 1/2", and 2.88 MB 3 1/2". Default setting for Floppy A drive is **1.44 MB 3 1/2"**.

#### OnBoard Floppy Controller

Select "Enabled" to enable the Onboard Floppy Controller. The options are "Disabled", and "**Enabled.**"

## ► PCI/PnP Configuration

This feature allows the user to set PCI/PnP configurations for the following items:

### Plug & Play OS

Select Yes to allow the OS to configure Plug & Play devices. (\*This is not required for system boot if you system has an OS that supports Plug & Play.) Select No to allow the AMIBIOS to configure all devices in the system.

### PCI Latency Timer

This option sets the latency of all PCI devices on the PCI bus. Select "32" to set the PCI latency to 32 PCI clock cycles. Select "64" to set the PCI latency to 64 PCI clock cycles. Select "96" to set the PCI latency to 96 PCI clock cycles. Select "128" to set the PCI latency to 128 PCI clock cycles. Select "160" to set the PCI latency to 160 PCI clock cycles. Select "192" to set the PCI latency to 192 PCI clock cycles. Select "224" to set the PCI latency to 224 PCI clock cycles. Select "248" to set the PCI latency to 248 PCI clock cycles.

### Allocate IRQ to PCI VGA

Set this value to allow or restrict the system from giving the VGA adapter card an interrupt address. The options are **Yes** and No.

### Palette Snooping

Select Enabled to inform the PCI devices that an ISA graphics device is installed in the system in order for the graphics card to function properly. The options are Enabled or **Disabled**.

### PCI IDE BusMaster

Set this value to allow or prevent the use of PCI IDE busmastering. Select "Enabled" to allow the AMI BIOS to use PCI busmaster for reading and writing to IDE drives. The options are **"Disabled"** and "Enabled".

### Offboard PCI/ISA IDE Card

This option allows the user to assign a PCI slot number to an Off-board PCI/ISA IDE card in order for it to function properly. The options are: **Auto**, PCI Slot1, PCI Slot2, PCI Slot3, PCI Slot4, PCI Slot5, and PCI Slot6.

### IRQ3/IRQ4/IRQ5/IRQ7/IRQ9/IRQ10/IRQ11/IRQ14

This feature specifies the availability of an IRQ to be used by a PCI, PnP device. Select **Reserved** for the IRQ to be used by a Legacy ISA device. The options are: **Available**, **Reserved**.

### DMA Channel 0/DMA Channel 1/DMA Channel 3/DMA Channel 5/ DMA Channel 6/DMA Channel 7

Select **Available** to indicate that a specific DMA channel is available to be used by a PCI/PnP device. Select **Reserved**, if the DMA channel specified is reserved for a Legacy ISA device.

### Reserved Memory Size

This feature specifies the size of memory block to be reserved for Legacy ISA devices. The options are: **Disabled**, 16K, 32K, 64K.

## ► Super IO Configuration Sub Menu



### **Serial Port1 Address**

This option specifies the base I/O port address and Interrupt Request address of serial port 1. Select "Disabled" to prevent the serial port from accessing any system resources. When this option is set to *Disabled*, the serial port physically becomes unavailable. Select "3F8/IRQ4" to allow the serial port to use 3F8 as its I/O port address and IRQ 4 for the interrupt address. The options are Disabled, **3F8/IRQ4**, 3E8/IRQ4, 2E8/IRQ3.

### **Serial Port2 Address**

This option specifies the base I/O port address and Interrupt Request address of serial port 2. Select "Disabled" to prevent the serial port from accessing any system resources. When this option is set to "Disabled", the serial port physically becomes unavailable. Select "2F8/IRQ3" to allow the serial port to use 2F8 as its I/O port address and IRQ 3 for the interrupt address. The options are Disabled, **2F8/IRQ3**, 3E8/IRQ4, 2E8/IRQ3.

### **Parallel Port Address**

This option specifies the I/O address used by the parallel port. Select Disabled to prevent the parallel port from accessing any system resources. When the value of this option is set to Disabled, the printer port becomes unavailable. Select **378** to allow the parallel port to use 378 as its I/O port address. The majority of parallel ports on computer systems use IRQ7 and I/O Port 378H as the standard setting. Select 278 to allow the parallel port to use 278 as its I/O port address. Select 3BC to allow the parallel port to use 3BC as its I/O port address.

#### **Parallel Port Mode**

Specify the parallel port mode. The options are **Normal**, Bi-directional, EPP and ECP.

#### **Parallel Port IRQ**

Select the IRQ (interrupt request) for the parallel port. The options are IRQ5 and **IRQ7**.

### **►Advanced Chipset Settings**

This item allows the user to configure the Advanced Chipset settings for the system.



## ►NorthBridge Configuration

This feature allows the user to configure the settings for Intel Lindenhurst NorthBridge chipset.

### Memory Remap Feature

Select Enabled to allow remapping of overlapped PCI memory above the total physical memory. The options are **Enabled** and Disabled.

### Memory Mirroring and Sparing

Select Enabled to enable Memory RAS (-Mirroring and Sparing) to allow the system to create a mirror copy of data written to the memory for data security. The options are **Disabled** and Enabled.

## ►SouthBridge Configuration

This feature allows the user to configure the settings for Intel ICH SouthBridge chipset.

### CPU B.I.S.T. Enable

Select Enabled to enable the function of CPU Built In Self Test. The options are Enabled and **Disabled**.

### ICH Delayed Transaction

Select Enabled to enable the function of ICH Delayed Transaction to provide back-compatibility for slower components . The options are **Enabled** and Disabled.

### ICH DCB Enable

Select Enabled to enable ICH DMA Collection Buffer. The options are **Enabled** and Disabled.

### Onboard AC' 97 Audio

Select Auto to enable the function of Onboard AC'97 automatically. The options are **Auto**, Enabled and Disabled.

## ►ACPI Configuration

This item allows the user to enable or disable ACPI support for the operating system.

### General ACPI Configuration

Use this feature to configure additional ACPI options. Select "Yes" if the operating system supports ACPI. Select No if the operating system does not support ACPI. The options are No and **Yes**.

#### Suspend Mode

This feature allows the user to select the ACPI state when the system is on the Suspend Mode. Select S1 if you want the system to standby. Select S3 to enable the function of Suspend to RAM, which will shorten bootup time after poweroff. The options are **S1(POS)** and S1&S3 (STR).

### Advanced ACPI Configuration

Use this feature to configure additional ACPI options. Select "Yes" if the operating system supports ACPI. Select No if the operating system does not support ACPI. The options are No and **Yes**.

#### ACPI 2.0 Features

Select Yes to allow RSDP pointers to point to the 64-bit Fixed System Description Tables. Select No to deactivate this function. The options are Yes and **No**.

#### ACPI APIC Support

Select Enabled to allow the ACPI APIC Table Pointer to be included in the RSDP pointer list. The options are **Enable**, and Disabled.

#### AMI OEMB Table

Select Enabled to allow the OEMB Table Pointer to be included in the R(x)SDT pointer lists. The options are **Enabled**, and Disabled.

#### Headless Mode

Select Enabled to activate the Headless Operation Mode through ACPI, which will allow the system to boot up and function properly without keyboard and monitor display. The options are Enabled, and **Disabled**.

## ►Power Configuration

This feature allows the user to configure PnP settings.

### Power Button Mode

This setting allows you to decide if the power button will go into the On/Off mode or the Suspend mode if it is pressed. The options are **On/Off** and **Suspend**.

### Restore on AC Power Loss

This setting allows you to choose how the system will react when power returns after an unexpected loss of power. The options are **Power Off**, **Power On** and **Last State**.

### Watch Dog Timer

This setting is used to enable or disabled the Watch Dog Timer function. It must be used in conjunction with the WD jumper (see Chapter 2 for details). The options are **Enabled** and **Disabled**.

## ►Event Log Configuration

Highlight this item and press <Enter> to view the contents of the event log.

### View Event Log

This feature allows the user to view all unread events.

### Mark All Events as Read

Highlight this item and press <Enter> to mark the DMI events as read.

### Clear Event Logs

This setting will clear all event logs when set to "OK". The options are "OK" and **"Cancel"**.

### ECC Event Logging

This setting allows you to enable or disable ECC Event logging. The options are **Enabled** or **Disabled**.

### Hub Interface Event Logging

This setting allows you to enable or disable Hub Interface Event logging. The options are **Enabled** or **Disabled**.

### System Bus Event Logging

This setting allows you to enable or disable System Bus Event logging. The options are **Enabled** or **Disabled**.

---

## **Memory Buffer Event Logging**

This setting allows you to enable or disable Memory Buffer Event logging. The options are Enabled or **Disabled**.

## **PCI Error Logging**

This setting allows you to enable or disable PCI Error logging. The options are Enabled or **Disabled**.

## **PCI Express Error Logging**

This setting allows you to enable or disable PCI Express Error logging. The options are Enabled or **Disabled**.

## **►MPS Configuration**

This section allows the user to configure the multi-processor table.

### **MPS Revision**

This feature allows the user to select MPS Revision. The options are 1.1 or 1.4.

## **►PCI Express Configuration**

This section allows the user to configure PCI Express slots.

### **Active State Power Management**

Select Enabled to activate the function of power management for signal transactions between PCI Express L0 and L1 Link. The options are Enabled and **Disabled**.

### **I/O Expander Mode**

This feature allows the user to set the IO Expand Mode for Hot Plug support. The options are **PCA9555**, Two PCA9554, One PCA9554 (Low), One PCA9554 (High), Two PCA9554A, One PCA9554A (Low), and One PCA9554 (High).

### **PCI Express Port2 (Slot 1)**

This feature allows the user to configure the PCI Express slot. The options are Auto, **Enabled**, and Disabled.

### **PCI Express Port4 (Slot 6)**

This feature allows the user to configure the PCI Express slot. The options are Auto, **Enabled**, and Disabled.

### **PCI Express Compliance Mode**

Select Enabled to enable MCH to activate PCI Express Compliance Mode. The options are **Disabled** and Enabled.

## Spread Spectrum

Select Enabled to enable Spread Spectrum. The options are **Disabled** and Enabled.


## ► Remote Access Configuration

You can use this screen to select options for the Remote Access Configuration. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option.

### Remote Access

This feature allows the user to disable the function of Remote Access. If Disabled is not select, then you can select a Remote Access type. The options are Enabled or **Disabled**.

## ► USB Configuration

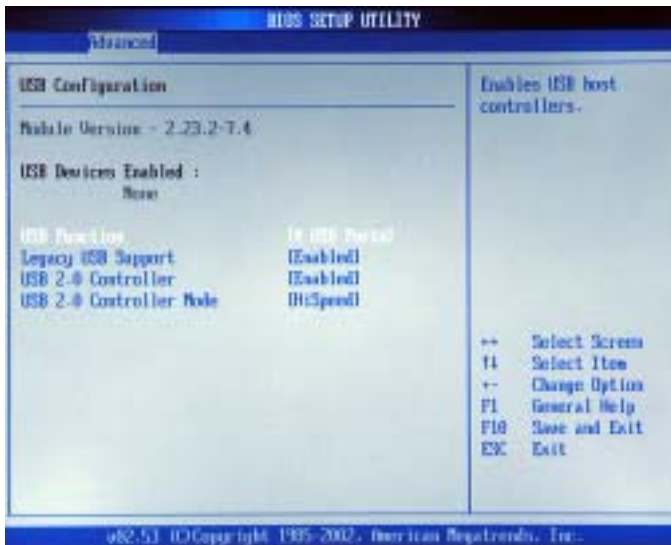

### USB Function

This feature allows you to enable 2 USB Ports or 4 USB Ports. The options are Disabled, 2 USB Ports, and **4 USB Ports**.

### Legacy USB Support

Select "Enabled" to enable the support for USB Legacy. Disable legacy support if there are no USB devices installed in the system. The options are Disabled, **Enabled** and Auto.

### USB 2.0 Controller

This setting allows you to enable or disable USB 2.0 Controller. The options are Disabled or **Enabled**.

## USB 2.0 Controller Mode

This setting allows you to configure USB 2.0 Controller Mode. The options are **Hi-Speed (480 Mbps)** or Full Speed-12Mbps.

## ►System Health Monitor

This feature allows the AMI BIOS to automatically display the status of the following items:



## System Health Function

Select "Enabled" to enable the function of Hardware Health Monitoring Device. The options are **"Enabled"** and "Disabled".

## CPU Temperature

The feature allows the user to set the CPU temperature threshold. The options range from 65°C to 90°C. The default setting is **78°C**.

If System Health Function is enabled, the BIOS will automatically display the status of the following items:

### CPU1 Temperature, CPU2 Temperature, System Temperature

The AMI BIOS will automatically display the following information:

CPU1 VCORE/CPU2 VCORE (\*for 2U systems),

3.3V Vcc(V), +5 Vin, 12V Vcc(V), -12V Vcc (V), DRAM VTT, 1.2V Vcc, 2.5V for DIMM, 1.5V Standby Power

**Fan Speed Control Modules:**

This feature allows the user to decide how the system controls the speeds of the onboard fans. If the option is set to "3-pin fan", the fan speed is controlled based upon the CPU die temperature. When the CPU die temperature is higher, the fan speed will be higher as well. If the option is set to "4-pin", the fan speed will be controlled by the Thermal Management Settings pre-configured by the user at this feature. Select "3-pin" if your chassis came with 3-pin fan headers. Select "4-pin" if your chassis came with 4-pin fan headers. Select "Workstation" if your system is used as a Workstation. Select "Server" if your system is used as a Server. Select "Disable" to disable the fan speed control function to allow the onboard fans to run at the full speed (12V) at all time. The Options are: **1. Disable**, 2. 3-pin (Server), 3. 3-pin (Workstation), 4. 4-pin (Server), 5. 4-pin (Workstation).

**Fan1 Speed to Fan6 Speed**

## 4-4 Boot Settings

### ► Boot Settings Configuration

This item allows the user to configure the boot settings for the system.



### **Quick Boot**

Select Enabled to allow the AMI BIOS to skip certain test during POST in order to shorten the time needed for the system to bootup. The options are **Enabled**, and Disabled.

### **Quiet Boot**

Set this value to allow the boot up screen options to be modified between POST messages or OEM logo. The default setting is **Enabled**. Select Disabled to allow the computer system to display the POST messages. Select Enabled to allow the computer system to display the OEM logo.

### **Add-On ROM Display Mode**

Set this option to display add-on ROM (read-only memory) messages. The default setting is **Force BIOS**. Select "Force BIOS" to allow the computer system to force a third party BIOS to display during system boot. Select "Keep Current" to allow the computer system to display the BIOS information during system boot. The options are Force BIOS and Keep Current.

### **Boot up Num-Lock**

Set this value to allow the Number Lock setting to be modified during boot up. The default setting is **On**. The options are On and Off.

### **PS/2 Mouse Support**

Set this value to allow the PS/2 mouse support to be modified. The options are **Auto**, Enabled and Disabled.

### **Wait for 'F1' If Error**

Select Enable to activate the function of Wait for F1 if Error. The options are **Enabled** and Disabled.

### **Hit 'DEL' Message Display**

Select Enabled to display Setup Message when the user hits the DEL key. The options are **Enabled** and Disabled.

### **Interrupt 19 Capture**

Select Enabled to allow ROMs to trap Interrupt 19. The options are Enabled and **Disabled**.



### ►Boot Device Priority

This feature allows the user to specify the sequence of priority for the Boot Device.

The settings are "1st Floppy Drive", "CD ROM", "HDD", and "Disabled." The default settings are:

- 1st boot device –1st Floppy Drive
- 2nd boot device – CD ROM
- 3rd boot device – HDD
- 4th boot device – IBA GE Slot 02180

### ►Hard Disk Drives

This feature allows the user to specify the Boot sequence from available Hard Drives.

#### 1st Drive/2nd Drive

Specify the boot sequence for 1st Hard Drive. The options are HDD and Disabled.

### ►Removable Drives

This feature allows the user to specify the Boot sequence from available Removable Drives.

#### 1st Drive

Specify the boot sequence for 1st Removable Drive. The options are **1st Floppy Drive** and Disabled.

### ►CD/DVD Drives


This feature allows the user to specify the boot sequence from available CDROM Drives.

#### 1st Drive

Specify the boot sequence for 1st Hard Drive. The options are **CD ROM** and Disabled.

## 4-5 Security Settings

the AMI BIOS provides a Supervisor and a User password. If you use both passwords, the Supervisor password must be set first.

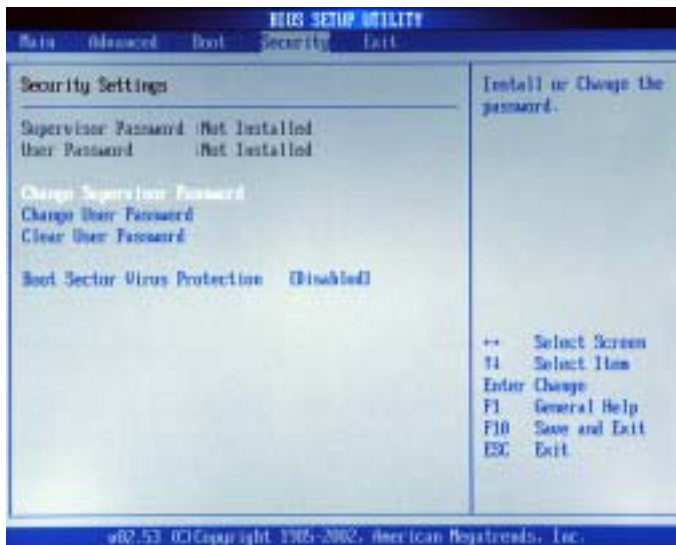

### Change Supervisor Password

Select this option and press <Enter> to access the sub menu, and then, type in the password.

### Change User Password

Select this option and press <Enter> to access the sub menu, and then, type in the password.

### Clear User Password


Select this option and press <Enter> to access the sub menu. You can use the sub menu to clear the user password.

### Boot Sector Virus Protection

This option is near the bottom of the Security Setup screen. Select "Disabled" to deactivate the Boot Sector Virus Protection. Select "Enabled" to enable boot sector protection. When "Enabled", the AMI BIOS displays a warning when any program (or virus) issues a Disk Format command or attempts to write to the boot sector of the hard disk drive. The options are "Enabled" and "**Disabled**".

## 4-6 Exit Options

Select the Exit tab from the AMI BIOS Setup Utility screen to enter the Exit the BIOS Setup screen.

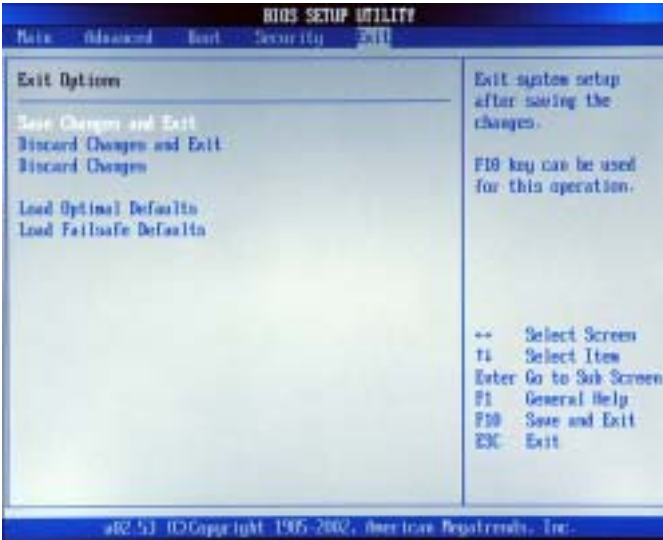

### Saving Changes and Exit

When you have completed the system configuration changes, select this option to leave the BIOS Setup and reboot the computer, so the new system configuration parameters can take effect. Select Save Changes and Exit from the Exit menu and press <Enter>.

### Discard Changes and Exit

Select this option to quit the BIOS Setup without making any permanent changes to the system configuration and reboot the computer. Select Discard Changes and Exit from the Exit menu and press <Enter>.

### Discard Changes

Select this option and press <Enter> to discard all the changes and return to the AMI BIOS Utility Program.

### **Load Optimal Defaults**

To set this feature, select Load Optimal Defaults from the Exit menu and press <Enter>. Then, Select "OK" to allow the BIOS to automatically load Optimal Defaults to the BIOS Settings. The Optimal settings are designed for maximum system performance, but may not work best for all computer applications.

### **Load Fail-Safe Defaults**

To set this feature, select Load Fail-Safe Defaults from the Exit menu and press <Enter>. The Fail-Safe settings are designed for maximum system stability, but not maximum performance.

## Appendix A

# BIOS Error Beep Codes and DS7/DS8 LED POST Codes

During the POST (Power-On Self-Test) routines, which are performed each time the system is powered on, errors may occur.

**Non-fatal errors** are those which, in most cases, allow the system to continue the boot-up process. The error messages normally appear on the screen.

**Fatal errors** are those which will not allow the system to continue the boot-up procedure. If a fatal error occurs, you should consult with your system manufacturer for possible repairs.

These fatal errors are usually communicated through a series of audible beeps. The numbers on the fatal error list, on the following page, correspond to the number of beeps for the corresponding error. All errors listed, with the exception of Beep Code 8, are fatal errors.

POST codes may be read on the debug LEDs located beside the LAN port on the motherboard backplane. See the description of the Debug LEDs (LED1 and LED2) in Section 2-6.

### A-1 AMIBIOS Error Beep Codes

Beep Code	Error Message	Description
1 beep	Refresh	Circuits have been reset. (Ready to power up.)
5 short, 1 long	Memory error	No memory detected in system
8 beeps	Display memory read/write error	Video adapter missing or with faulty memory

## **A-2      DS7/DS8 LED Post Codes**

<b>LED Indicators</b>		<b>Description/Message</b>
<b>DS7</b>	<b>DS8</b>	
On	On	PWR On
On	Off	SPD Read OK
Off	On	Memory Size-OK
Off	Off	Starting Bus Initialization

## Appendix B

### BIOS POST Checkpoint Codes

When AMIBIOS performs the Power On Self Test, it writes checkpoint codes to I/O port 0080h. If the computer cannot complete the boot process, diagnostic equipment can be attached to the computer to read I/O port 0080h.

#### B-1 Uncompressed Initialization Codes

The uncompressed initialization checkpoint codes are listed in order of execution:

Checkpoint	Code Description
D0h	The NMI is disabled. Power on delay is starting. Next, the initialization code checksum will be verified.
D1h	Initializing the DMA controller, performing the keyboard controller BAT test, starting memory refresh, and entering 4 GB flat mode next.
D3h	Starting memory sizing next.
D4h	Returning to real mode. Executing any OEM patches and setting the Stack next.
D5h	Passing control to the uncompressed code in shadow RAM at E000:0000h. The initialization code is copied to segment 0 and control will be transferred to segment 0.
D6h	Control is in segment 0. Next, checking if <Ctrl> <Home> was pressed and verifying the system BIOS checksum. If either <Ctrl> <Home> was pressed or the system BIOS checksum is bad, next will go to checkpoint code E0h. Otherwise, going to checkpoint code D7h.

## B-2 Bootblock Recovery Codes

The bootblock recovery checkpoint codes are listed in order of execution:

<b>Checkpoint</b>	<b>Code</b>	<b>Description</b>
E0h		The onboard floppy controller if available is initialized. Next, beginning the base 512 KB memory test.
E1h		Initializing the interrupt vector table next.
E2h		Initializing the DMA and Interrupt controllers next.
E6h		Enabling the floppy drive controller and Timer IRQs. Enabling internal cache memory.
Edh		Initializing the floppy drive.
Eeh		Looking for a floppy diskette in drive A:. Reading the first sector of the diskette.
Efh		A read error occurred while reading the floppy drive in drive A:.
F0h		Next, searching for the AMIBOOT.ROM file in the root directory.
F1h		The AMIBOOT.ROM file is not in the root directory.
F2h		Next, reading and analyzing the floppy diskette FAT to find the clusters occupied by the AMIBOOT.ROM file.
F3h		Next, reading the AMIBOOT.ROM file, cluster by cluster.
F4h		The AMIBOOT.ROM file is not the correct size.
F5h		Next, disabling internal cache memory.
FBh		Next, detecting the type of flash ROM.
FCh		Next, erasing the flash ROM.
FDh		Next, programming the flash ROM.
FFh		Flash ROM programming was successful. Next, restarting the system BIOS.

## B-3 Uncompressed Initialization Codes

The following runtime checkpoint codes are listed in order of execution.

These codes are uncompressed in F0000h shadow RAM.

<b>Checkpoint</b>	<b>Code</b>	<b>Description</b>
03h		The NMI is disabled. Next, checking for a soft reset or a power on condition.
05h		The BIOS stack has been built. Next, disabling cache memory.
06h		Uncompressing the POST code next.
07h		Next, initializing the CPU and the CPU data area.
08h		The CMOS checksum calculation is done next.
0Ah		The CMOS checksum calculation is done. Initializing the CMOS status register for date and time next.
0Bh		The CMOS status register is initialized. Next, performing any required



	initialization before the keyboard BAT command is issued.
0Ch	The keyboard controller input buffer is free. Next, issuing the BAT command to the keyboard controller.
0Eh	The keyboard controller BAT command result has been verified. Next, performing any necessary initialization after the keyboard controller BAT command test.
0Fh	The initialization after the keyboard controller BAT command test is done. The keyboard command byte is written next.
10h	The keyboard controller command byte is written. Next, issuing the Pin 23 and 24 blocking and unblocking command.
11h	Next, checking if <End or <Ins> keys were pressed during power on. Initializing CMOS RAM if the <i>Initialize CMOS RAM in every boot</i> AMIBIOS POST option was set in AMIBCP or the <End> key was pressed.
12h	Next, disabling DMA controllers 1 and 2 and interrupt controllers 1 and 2.
13h	The video display has been disabled. Port B has been initialized. Next, initializing the chipset.
14h	The 8254 timer test will begin next.
19h	The 8254 timer test is over. Starting the memory refresh test next.
1Ah	The memory refresh line is toggling. Checking the 15 second on/off time next.
2Bh	Passing control to the video ROM to perform any required configuration before the video ROM test.
2Ch	All necessary processing before passing control to the video ROM is done. Looking for the video ROM next and passing control to it.
2Dh	The video ROM has returned control to BIOS POST. Performing any required processing after the video ROM had control.
23h	Reading the 8042 input port and disabling the MEGAKEY Green PC feature next. Making the BIOS code segment writable and performing any necessary configuration before initializing the interrupt vectors.
24h	The configuration required before interrupt vector initialization has completed. Interrupt vector initialization is about to begin.

<b>Checkpoint</b>	<b>Code Description</b>
25h	Interrupt vector initialization is done. Clearing the password if the POST DIAG switch is on.
27h	Any initialization before setting video mode will be done next.
28h	Initialization before setting the video mode is complete. Configuring the monochrome mode and color mode settings next.
2Ah	Bus initialization system, static, output devices will be done next, if present. See the last page for additional information.
2Eh	Completed post-video ROM test processing. If the EGA/VGA controller is not found, performing the display memory read/write test next.
2Fh	The EGA/VGA controller was not found. The display memory read/write test is about to begin.
30h	The display memory read/write test passed. Look for retrace checking next.
31h	The display memory read/write test or retrace checking failed. Performing the alternate display memory read/write test next.
32h	The alternate display memory read/write test passed. Looking for alternate display retrace checking next.
34h	Video display checking is over. Setting the display mode next.
37h	The display mode is set. Displaying the power on message next.
38h	Initializing the bus input, IPL, general devices next, if present. See the last page of this chapter for additional information.
39h	Displaying bus initialization error messages. See the last page of this chapter for additional information.
3Ah	The new cursor position has been read and saved. Displaying the <i>Hit &lt;DEL&gt;</i> message next.
3Bh	The <i>Hit &lt;DEL&gt;</i> message is displayed. The protected mode memory test is about to start.
40h	Preparing the descriptor tables next.
42h	The descriptor tables are prepared. Entering protected mode for the memory test next.
43h	Entered protected mode. Enabling interrupts for diagnostics mode next.
44h	Interrupts enabled if the diagnostics switch is on. Initializing data to check memory wraparound at 0:0 next.
45h	Data initialized. Checking for memory wraparound at 0:0 and finding the total system memory size next.
46h	The memory wraparound test is done. Memory size calculation has been done. Writing patterns to test memory next.
47h	The memory pattern has been written to extended memory. Writing patterns to the base 640 KB memory next.

Checkpoint	Code	Description
48h		Patterns written in base memory. Determining the amount of memory below 1 MB next.
49h		The amount of memory below 1 MB has been found and verified. Determining the amount of memory above 1 MB memory next.
4Bh		The amount of memory above 1 MB has been found and verified. Checking for a soft reset and clearing the memory below 1 MB for the soft reset next. If this is a power on situation, going to checkpoint 4Eh next.
4Ch		The memory below 1 MB has been cleared via a soft reset. Clearing the memory above 1 MB next.
4Dh		The memory above 1 MB has been cleared via a soft reset. Saving the memory size next. Going to checkpoint 52h next.
4Eh		The memory test started, but not as the result of a soft reset. Displaying the first 64 KB memory size next.
4Fh		The memory size display has started. The display is updated during the memory test. Performing the sequential and random memory test next.
50h		The memory below 1 MB has been tested and initialized. Adjusting the displayed memory size for relocation and shadowing next.
51h		The memory size display was adjusted for relocation and shadowing. Testing the memory above 1 MB next.
52h		The memory above 1 MB has been tested and initialized. Saving the memory size information next.
53h		The memory size information and the CPU registers are saved. Entering real mode next.
54h		Shutdown was successful. The CPU is in real mode. Disabling the Gate A20 line, parity, and the NMI next.
57h		The A20 address line, parity, and the NMI are disabled. Adjusting the memory size depending on relocation and shadowing next.
58h		The memory size was adjusted for relocation and shadowing. Clearing the <i>Hit &lt;DEL&gt;</i> message next.
59h		The <i>Hit &lt;DEL&gt;</i> message is cleared. The <i>&lt;WAIT...&gt;</i> message is displayed. Starting the DMA and interrupt controller test next.

<b>Checkpoint</b>	<b>Code Description</b>
60h	The DMA page register test passed. Performing the DMA Controller 1 base register test next.
62h	The DMA controller 1 base register test passed. Performing the DMA controller 2 base register test next.
65h	The DMA controller 2 base register test passed. Programming DMA controllers 1 and 2 next.
66h	Completed programming DMA controllers 1 and 2. Initializing the 8259 interrupt controller next.
67h	Completed 8259 interrupt controller initialization.
7Fh	Extended NMI source enabling is in progress.
80h	The keyboard test has started. Clearing the output buffer and checking for stuck keys. Issuing the keyboard reset command next.
81h	A keyboard reset error or stuck key was found. Issuing the keyboard controller interface test command next.
82h	The keyboard controller interface test completed. Writing the command byte and initializing the circular buffer next.
83h	The command byte was written and global data initialization has completed. Checking for a locked key next.
84h	Locked key checking is over. Checking for a memory size mismatch with CMOS RAM data next.
85h	The memory size check is done. Displaying a soft error and checking for a password or bypassing WINBIOS Setup next.
86h	The password was checked. Performing any required programming before WINBIOS Setup next.
87h	The programming before WINBIOS Setup has completed. Uncompressing the WINBIOS Setup code and executing the AMIBIOS Setup or WINBIOS Setup utility next.
88h	Returned from WINBIOS Setup and cleared the screen. Performing any necessary programming after WINBIOS Setup next.
89h	The programming after WINBIOS Setup has completed. Displaying the power on screen message next.
8Bh	The first screen message has been displayed. The <WAIT...> message is displayed. Performing the PS/2 mouse check and extended BIOS data area allocation check next.
8Ch	Programming the WINBIOS Setup options next.
8Dh	The WINBIOS Setup options are programmed. Resetting the hard disk controller next.
8Fh	The hard disk controller has been reset. Configuring the floppy drive controller next.
91h	The floppy drive controller has been configured. Configuring the hard disk drive controller next.

<b>Checkpoint</b>	<b>Code Description</b>
95h	Initializing the bus option ROMs from C800 next. See the last page of this chapter for additional information.
96h	Initializing before passing control to the adaptor ROM at C800.
97h	Initialization before the C800 adaptor ROM gains control has completed. The adaptor ROM check is next.
98h	The adaptor ROM had control and has now returned control to BIOS POST. Performing any required processing after the option ROM returned control.
99h	Any initialization required after the option ROM test has completed. Configuring the timer data area and printer base address next.
9Ah	Set the timer and printer base addresses. Setting the RS-232 base address next.
9Bh	Returned after setting the RS-232 base address. Performing any required initialization before the Coprocessor test next.
9Ch	Required initialization before the Coprocessor test is over. Initializing the Coprocessor next.
9Dh	Coprocessor initialized. Performing any required initialization after the Coprocessor test next.
9Eh	Initialization after the Coprocessor test is complete. Checking the extended keyboard, keyboard ID, and Num Lock key next. Issuing the keyboard ID command next.
A2h	Displaying any soft errors next.
A3h	The soft error display has completed. Setting the keyboard typematic rate next.
A4h	The keyboard typematic rate is set. Programming the memory wait states next.
A5h	Memory wait state programming is over. Clearing the screen and enabling parity and the NMI next.
A7h	NMI and parity enabled. Performing any initialization required before passing control to the adaptor ROM at E000 next.
A8h	Initialization before passing control to the adaptor ROM at E000h completed. Passing control to the adaptor ROM at E000h next.
A9h	Returned from adaptor ROM at E000h control. Performing any initialization required after the E000 option ROM had control next.
Aah	Initialization after E000 option ROM control has completed. Displaying the system configuration next.
Abh	Uncompressing the DMI data and executing DMI POST initialization next.
B0h	The system configuration is displayed.
B1h	Copying any code to specific areas.
00h	Code copying to specific areas is done. Passing control to INT 19h boot loader next.

## **Notes**

## Appendix C

# Installing Software Drivers and Windows Operating System

After all the hardware has been installed, you must first configure the Adaptec Embedded Serial ATA RAID Driver before you install the Windows operating system. The necessary drivers are all included on the Supermicro bootable CDs that came packaged with your motherboard. (For the information on Adaptec's SATA HostRAID Utility based on Marvell's chip, please refer to Appendix D.)

### **C-1 Introduction to the Adaptec Embedded Serial ATA RAID Controller Driver**

#### **Serial ATA (SATA)**

Serial ATA(SATA) is a physical storage interface. It uses a single cable with a minimum of four wires to create a point-to-point connection between devices. It is a serial link which supports SATA Transfer rates from 150MBps. Because the serial cables used in SATA are thinner than the traditional cables used in Parallel ATA(PATA), SATA systems have better airflow and can be installed in smaller chassis than Parallel ATA. In addition, the cables used in PATA can only extend to 40cm long, while Serial ATA cables can extend up to one meter. Overall, Serial ATA provides better functionality than Parallel ATA.

#### **Introduction to the Intel 6300ESB (Hance Rapids) I/O Controller Hub**

Located in the South Bridge of the Intel E7525 Tumwater Chipset, the 6300ESB (Hance Rapids) I/O Controller Hub provides the I/O subsystem with access to the rest of the system. It supports 2-channel Ultra ATA/100 Bus Master IDE controller (PATA) and two Serial ATA (SATA) Host Controllers, which support up to two Serial ATA ports and up to two RAID drives. The 6300ESB (Hance Rapids) I/O Controller Hub supports the following Parallel ATA (PATA) and Serial (SATA) device configurations:

### **To configure SATA RAID for Operating Systems that support RAID functions(--Windows, Red Hat & SuSe, Linux)**

1. Select "Advanced Setting" from the AMI BIOS menu.
2. Select the IDE Configuration menu.
3. Change the IDE Configuration to "P-ATA Only."
4. Under the item-"Configure S-ATA as RAID", select "Yes".
5. Tap the <Esc> key and scroll down to "Exit". Select "Save and Exit" from the "Exit" menu. Press the <Enter> key to save the changes and exit the BIOS.
6. Once you've exited the BIOS Utility, the system will re-boot.
7. During the system startup, press the <Ctrl> and the <A> keys simultaneously to run the Adaptec RAID Configuration Utility when prompted by the following message:

Press <Ctrl><A> for Adaptec RAID Configuration Utility

### **The Adaptec Embedded Serial ATA with HostRAID Controller Driver**

Adaptec's Embedded Serial ATA RAID with HostRAID controller adds RAID functionality to the Serial ATA I/O controller by supporting RAID 0 (Striping) or RAID 1 (Mirroring) to enhance the industry's pioneer PCI-to-e host controller products. RAID striping (RAID 0) can greatly improve hard disk I/O performance because of its capability in striping data across multiple drives. RAID mirroring (RAID 1) allows the data to be simultaneously written to two drives, so critical data is always available even if a single hard disk fails. Due to the built-in functionality, the X6DAL-G/X6DAL-TG is specially designed to keep pace with the increasing performance demands of computer systems by improving disk I/O throughput and providing data accessibility regardless of a single disk failure. By incorporating the Adaptec Embedded Serial ATA into the motherboard design, Supermicro's X6DAL-G/X6DAL-TG offers the user with the benefits of SATARAID without the high costs associated with hardware RAID applications.

(\*Note: For Adaptec's RAID Driver Installation Instructions, please refer to the Adaptec RAID Controller User's Guide: "Emb\_SA\_RAID\_UG.pdf" in the CD that came with this motherboard. You can also download a copy of Adaptec's User's Guide from our web site at [www.supermicro.com](http://www.supermicro.com).)



## Using the Adaptec RAID Configuration Utility (ARC)

The Adaptec RAID Configuration Utility is an embedded BIOS Utility, including:

\*Array Configuration Utility: Use this utility when you want to create, configure and manage arrays.

\* Disk Utilities: Use this option to format or verify disks.

To run the Adaptec RAID Configuration Utility, you will need to enable the RAID function in the system BIOS (refer to Chapter 4 for System BIOS Configurations), and then, press the <Ctrl> and <A> keys simultaneously when prompted to do so during the system startup. (Refer to the previous page for detailed instructions.)

**(\*Note:** To select an option, use the arrow keys to highlight the item and then press the <Enter> key to select it. To return to the previous menu, press the <ESC> key.)

### A. Using the Array Configuration Utility (ACU)

The Array Configuration Utility (ACU) enables you to create, manage, and delete arrays from the controller's BIOS, add and delete spare drives, and initialize drives. During the system startup, press <Ctrl> and <A> key simultaneously, and the main menu will appear.



**Managing Arrays**

Select this option to view array properties, and delete arrays. The following sections describe the operations Of "Managing Arrays".

To select this option, use the arrow keys and the <enter> key to select "Managing Arrays" from the main menu (as shown above).



### **Viewing Array Properties**

To view the properties of an existing array:

1. At the BIOS prompt, press **Ctrl+A**.
2. From the ARC menu, select **Array Configuration Utility (ACU)**.
3. From the ACU menu, select **Manage Arrays** (as shown on the previous screen.)
4. From the List of Arrays dialog box, select the array you want to view and press **Enter**.

The Array Properties dialog box appears, showing detailed information on the array. The physical disks associated with the array are displayed here.

5. Press **Esc** to return to the previous menu.

### **Deleting Arrays**

*\*Warning: Back up the data on an array before you delete it to prevent the loss of data. Deleted arrays cannot be restored.*

To delete an existing array:

1. Turn on your computer and press **Ctrl+A** when prompted to access the ARC utility.
2. From the ARC main menu, select **Array Configuration Utility (ACU)**.
3. From the ACU menu, select **Manage Arrays**.
4. Select the array you wish to delete and press **Delete**.
5. In the Array Properties dialog box, select **Delete** and press **Enter**. The following prompt is displayed:

*\*Warning!! Deleting the array will render array unusable. Do you want to delete the array?(Yes/No):*

**RAID 1 only—the following prompt is also displayed:**

*Deleting the partition will result in data loss! Do you also want to delete the partition? (Yes/No):*

6. Press **Yes** to delete the array or partition or **No** to return to the previous menu.
7. Press **Esc** to return to the previous menu.

## Creating Arrays

Before creating arrays, make sure the disks for the array are connected and installed in your system. Note that disks with no usable space, or disks that are un-initialized are shown in gray and cannot be used. See [Initializing Disk Drives](#).

### To create an array:

- 1 Turn on your computer and press **Ctrl+A** when prompted to access the ARC utility.
  - 2 From the ARC menu, select **Array Configuration Utility Main Menu (ACU)** (as shown on the first screen on page C-5).
  - 3 From the ACU menu, select **Create Array**.
  - 4 Select the disks for the new array and press Insert (as the screen shown below).
- (\*Note: To deselect any disk, highlight the disk and press **Delete**.)



5 Press **Enter** when both disks for the new array are selected. The Array Properties menu displays (as the screen shown below).



### Assigning Array Properties

Once you've create a new array, you are ready to assign the properties to the array.

**\*Caution:** Once the array is created and its properties are assigned, you cannot change the array properties using the ACU. You will need to use the Adaptec Storage Manager - Browser Edition. (Refer to Adaptec's User's Guide in the enclosed CD.)

To assign properties to the new array:

1. In the Array Properties menu (as shown in the screen below), select an array type and press **Enter**.

Note that only the available array types: RAID 0, and RAID1, are displayed on the screen. (\*RAID 0 or RAID 1 requires two drives.)



2. Under the item "**Arrays Label**", type in an label and press **Enter**.  
(\*Note: The label shall not be more than 15 characters.)

3. For RAID 0, select the desired stripe size. (\*Note: Available stripe sizes are 16, 32, and 64 KB-default. It is recommended that you *do not* change the default setting.)

4. The item: "**Create RAID via**" allows you to select between the different creating methods for RAID 0 and RAID 1.

The following table gives examples of when each is appropriate.

Raid Level	Create Via	When Appropriate
RAID 0	No Init	Creating a RAID 0 on new drives
RAID 0	Migrate (*Note)	Creating a RAID 0 from one new drive and one drive with data you wish to preserve
RAID 1	Build1	Any time you wish to create a RAID 1, but especially if you have data on one drive that you wish to preserve
RAID 1	Clear	Creating a RAID 1 on new drives, or when you want to ensure that the array contains no data after creation.
RAID 1	Quick	Fastest way to create a RAID 1. Appropriate when using new drives
RAID 1	Init	

(\*Note: If you select Migrate for RAID 0, or Build for RAID 1, you will be asked to select the source drive. The contents of the source drive will be preserved. However, the data on the new drive will be lost.)

5. When you are finished, press **Done** (as the screen shown below).



#### Notes:

1. Before adding a new drive to an array, back up any data contained on the new drive. Otherwise, all data will be lost.
2. If you stop the Build or Clear process on a RAID 1 from ACU, you can restart it by pressing Ctrl+R.
3. A RAID 1 created using the Quick Init option may return some data mismatches if you later run a consistency check. This is normal and is not a cause for concern.
4. The ACU allows you to use drives of different sizes in a RAID . However, during a build operation, only the smaller drive can be selected as the source or first drive.
5. When migrating from single volume to RAID 0, migrating from a larger drive to a smaller drive is allowed. However, the destination drive must be at least half the capacity of the source drive.
6. Adaptec does not recommend that you migrate or build an array on Windows dynamic disks (volumes), as it will result in data loss.

**Warning:** Do not interrupt the creation of a RAID 0 using the Migrate option. If you do, you will not be able to restart, or to recover the data that was on the source drive.

## Adding a Bootable Array

To make an array bootable:

1. From the Main menu, select **Manage Arrays**.
2. From the List of Arrays, select the array you want to make bootable, and press **Ctrl+B**.
3. Enter Y to create a bootable array when the following message is displayed: "This will make all other existing bootable array non-bootable. Do you want to make this array bootable? (Yes/No):" Then, a bootable array will be created. An asterisk will appear next to the bootable array (as shown in the picture below:)



## Deleting a Bootable Array

To delete a bootable array:

1. From the Main menu, select **Manage Arrays**.
2. From the List of Arrays, select the bootable array (\*) you want to delete, and press **Ctrl+B**. (\* a bootable array is the array marked with an asterisk (as shown in the picture above).)
3. Enter Y to delete a bootable array when the following message is displayed: "The array is already marked bootable. Do you want to make this array as not bootable? (Yes/No):" Then, the bootable array will be deleted and the asterisk will disappear.

(\*Note: do not use the delete key to delete the bootable array.)



---

## Initializing Disk Drives


If an installed disk does not appear in the disk selection list for creating a new array, or if it appears grayed out, you may have to initialize it before you can use it as part of an array. Drives attached to the controller must be initialized before they can be used in an array.

**Caution:** Initializing a disk overwrites the partition table on the disk and makes any data on the disk inaccessible. If the drive is used in an array, you may not be able to use the array again.

**Do not** initialize a disk that is part of a boot array. To determine which disks are associated with a particular array, please refer to [Viewing Array Properties](#).

### To initialize drives:

1. Turn on your computer and press **Ctrl+A** when prompted to access the ARC utility.
2. From the ARC menu, select **Array Configuration Utility (ACU)** (as shown in the screen below).

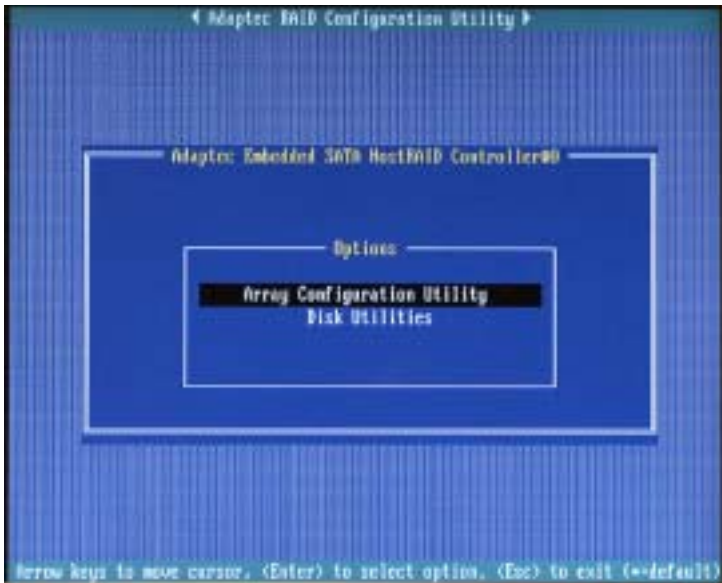

3. Select **Initialize Drives** (as shown in the screen below).



4. Use the up and down arrow keys to highlight the disk you wish to initialize and press **Insert** (as shown in the screen below).



5. Repeat [Step 4](#) so that both drives to be initialized are selected (as shown in the screen below).



6. Press **Enter**.
7. Read the warning message as shown in the screen.



8. Make sure that you have selected the correct disk drives to initialize. If correct, type **Y** to continue.

## Rebuilding Arrays

**\*Note 1:** Rebuilding applies to Fault Tolerant array (RAID 1) only.

If an array Build process (or initialization) is interrupted or critical with one member missing, you must perform a Rebuild to get the array to Optimal status. For a critical array Rebuild operation, the optimal drive is the source drive.

**\*Note 2:** If no spare array exists and a hard disk drive fails, you need to create a spare before you can rebuild an array.

### To Rebuild an array:

**1** From the Main Menu, select **Manage Arrays** (as shown in the screen below). From the List of Arrays, select the array you want to Rebuild.

**2** Press **Ctrl+R** to Rebuild.



---

## Using the Disk Utilities

The Disk Utilities enable you to format or verify the media of your Serial ATA hard disks.

### To access the disk utilities:

1. Turn on your computer and press **Ctrl+A** when prompted to access the ARC utility (as shown in the screen below.)



2. From the ARC menu, select **Disk Utilities** as shown in the screen below.



3 Select the desired disk and press **Enter** (as shown in the screen below.)



**You can choose from the following options:**

**1. Format Disk**—Simulates a low-level format of the hard drive by writing zeros to the entire disk. Serial ATA drives are low-level formatted at the factory and do not need to be low-level formatted again.

(\***Caution:** Formatting destroys all data on the drive. Be sure to back up your data before performing this operation.)

**2. Verify Disk Media**—Scans the media of a disk drive for defects.

**To Exit Adaptec RAID Configuration Utility**

1. Once you have completed RAID array configurations, press **ESC** to exit. The following screen will appear.

2. Press **Yes** to exit the Utility.



(\***For more information regarding Adaptec RAID Utility, please refer to Adaptec's User's Guide in the CD included in your shipping package. You can also download a copy of Adaptec User's Guide from our web site at: [www.supermicro.com](http://www.supermicro.com).)**

## **C-2 Installing Intel's Hance Rapids Driver by Adaptec and the Windows OS**

- a. Insert Supramicro's bootable CD that came with the package into the CD Drive during the system reboot, and the screen:"Super Micro Driver Diskette Maker" will appear.
- b. From the list displayed on the screen, choose the item: "Intel Hance Rapids Driver by 3rd Party (Adaptec)" and press <ENTER>.
- c. From the next screen displayed, choose the OS driver you want to install and press <Enter>.
- d. Insert a formatted diskette into drive A: and press <Enter> as prompted.
- e. Exit the program after the process is completed. Then, reboot the system.
- f. Insert Microsoft Windows OS Setup CD in the CD Driver, and the system will start to boot up from CD.
- g. Press the <F6> key when the message-"Press F6 if you need to install a third party SCSI or RAID driver" displays.
- h. When the Windows OS Setup screen appears, press "S" to specify additional device(s).
- i. Insert the driver diskette-"Adaptec Embedded Serial ATA Raid Controller Driver" into Drive A: and press the <Enter> key.
- j. Choose Adaptec Embedded Host Serial ATA Raid Controller from the list indicated in the Windows OS Setup Screen, and press the <Enter> key.
- k. Press the <Enter> key to continue the installation process. (If you need to specify any additional devices to be installed, do it at this time.) Once all devices are specified, press the <Enter> key to continue with the installation.
- l. From the Windows OS Setup screen, press the <Enter> key. The OS Setup will automatically load all device files, and, then, continue the Windows OS installation.
- m. After Windows OS Installation is completed, the system will automatically reboot.



## C-3 Installing Other Software Programs and Drivers

### A. Installing Drivers other than Adaptec Embedded Serial ATA RAID Controller Driver

After you've installed Windows Operating System, a screen as shown below will appear. You are ready to install software programs and drivers that have not yet been installed. To install these software programs and drivers, click the icons to the right of these items.



Driver/Tool Installation Display Screen

(\*Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to the bottom) one at a time. **After installing each item, you must re-boot the system before moving on to the next item on the list.** You should install everything here except for the Supero Doctor utility, Intel LDCM and the LAN/SCSI driver diskettes, which are optional. The bottom icon with a CD on it allows you to view the entire contents of the CD. )

(\*Please refer to the Adaptec User's Guide for the installation of Adaptec's Serial ATA RAID Controller Driver. Adaptec's User's Guide is included in the CD. You can also download a copy of the user's guide from our web site.)

### Supero Doctor III

The Supero Doctor III program is a Web base management tool that supports remote management capability. It includes Remote and Local Management tools. The local management is called SD III Client. The Supero Doctor III program included on the CDROM that came with your motherboard allows you to monitor the environment and operations of your system. Supero Doctor III displays crucial system information such as CPU temperature, system voltages and fan status. See the Figure below for a display of the Supero Doctor III interface.

#### Supero Doctor III Interface Display Screen-I (Health Information)





## Notes

## Appendix D

### **Software Installation: Adaptec's SATA HostRAID Utility for Marvell's 88SX6041 Chip (\*For X6DAL-TG only.)**

After all the hardware has been installed, you must first configure Adaptec's Serial ATA RAID Driver (\*Note) before you install the Windows operating system, and other software drivers. The necessary drivers are all included on the Supermicro CDs that came packaged with your motherboard.

#### **D-1 Configuring Serial ATA RAID Functions**

##### **Serial ATA (SATA)**

Serial ATA(SATA) is a physical storage interface. It uses a single cable with a minimum of four wires to create a point-to-point connection between devices. It is a serial link which supports SATA Transfer rates up to 150MBps. Because the serial cables used in SATA are thinner than the traditional cables used in Parallel ATA(PATA), SATA systems have better airflow and can be installed in smaller chassis than Parallel ATA. In addition, the cables used in PATA can only extend to 40cm long, while Serial ATA cables can extend up to one meter. Overall, Serial ATA provides better functionality than Parallel ATA.

##### **Introduction to Adaptec's Serial ATA RAID Controller**

Adaptec Embedded Serial ATA RAID with HostRAID adds RAID functionality to the SATA I/O controller by supporting RAID levels 0, 1, and 10. With HostRAID, you can optimize the reliability, performance and data protection of the system.

##### **Adaptec's Serial ATA RAID Storage Requirements**

Adaptec's device drivers and storage management software require approximately 20 MB of disk space.

## Operating Systems supported by the SATA RAID Host Controller

### **Microsoft**

\*Windows® 2000, Windows Server® 2003, and Windows XP

### **Linux**

\*Red Hat 8.0 and 9.0

\*SuSE 8.1 and 8.2

## Storage Management Software Overview

Adaptec Embedded Serial ATA RAID includes the following software tools to manage your storage subsystem:

**Adaptec Storage Manager – Browser Edition**—Browser-based storage management software that provides all of the creation, management, and data logging needed to manage arrays. Arrays may be set up and managed on systems using the following operating systems: Windows 2000, Windows Server 2003, and Windows XP

**Red Hat Linux 8.0 and 9.0**—SuSE Linux 8.1 and 8.2.

**Adaptec RAID Configuration (ARC) Utility**—Part of the controller's built-in BIOS code. You start ARC by pressing Ctrl+A during BIOS startup.

**Array Configuration Utility (ACU)**—A DOS/BIOS application used to create, configure, and manage arrays.

## D-2 Adaptec's SATA RAID Host Driver Installation

### Installing the Driver in a New Windows System

To install the driver to a new system that does not have the OS installed:

1. Create a driver disk by following the instructions from the Web site or the product CD.
2. Restart the computer.
3. If creating an array, press Ctrl-A when prompted to enter the ARC utility. For instructions on creating an array from the BIOS, see [Adaptec RAID Configuration Utility](#). For a simple volume, skip to [Step 4](#).
4. When the array is finished building or if you are continuing from [Step 3](#), insert the Windows setup CD and restart the system.
5. Press F6 when prompted to install a third-party driver.

(\*Note: When F6 is active, a prompt appears at the bottom of the screen. Press F6 immediately—you only have 5 seconds. If you miss your chance, **restart** this Windows installation to complete it correctly. Otherwise, Windows will not recognize your controller.)

6. Insert the driver disk you created in [Step 1](#) and wait until prompted to install a driver.
7. Press S to specify that the driver is on the floppy disk, and press Enter. Windows searches the disk for a suitable driver.

8. When the Adaptec Embedded Serial ATA HostRAID driver is found, press Enter. Follow the remaining on-screen instructions to complete your installation.

### **Installing the Driver in an Existing Windows System**

Please follow the steps listed below to install a driver in a system that already has a Windows operating system:

1. Create a driver disk by following the instructions from the Web site or the product CD.
2. Start Windows. Windows launches the Found New Hardware Wizard, which searches for the controller driver.
3. Insert the driver disk you created in [Step 1](#). Select the floppy disk drive as the source and click Next.
4. If necessary, select the appropriate driver for your operating system.
5. Click Next as needed to complete the controller installation.
6. Remove the driver disk.
7. If prompted, restart the computer.
8. Your installation is complete. If you want to create an array from the BIOS, see [the section-"Adaptec RAID Configuration Utility"](#). If you want to create an array from the operating system, see [the section-"Using Adaptec Storage Manager – Browser Edition"](#).

### **Installing the driver in a new Linux system**

To Install the Red Hat 8.0 or 9.0 Driver in a New Linux System:

1. Obtain a driver disk from either the Web site or the product CD.
2. Restart the computer.
3. If creating an array, press Ctrl-A when prompted to enter the ARC utility. For instructions on creating an array from the BIOS, see [the section-"Adaptec RAID Configuration Utility"](#). For a simple volume, skip to [Step 4](#).
4. When the array is finished building, or if you are continuing from [Step 3](#), insert the Red Hat CD Disk 1 in the CD-ROM drive and restart the system.
5. When the Red Hat Welcome screen appears, type expert or linux dd at the boot prompt.
6. When prompted, insert the driver disk (see [Step 1](#)) and select OK.
7. Follow the prompts to set up your preferred environment.
8. If you intend to install other third-party devices, proceed with the installation of those devices. Otherwise, select Done.
9. Continue with the Linux installation according to the Red Hat documentation.

## **Installing the SuSE 8.1 or 8.2 Driver in a New Linux System**

1. Obtain a driver disk from either the Web site or the product CD.
2. Restart the computer.
3. If creating an array, press Ctrl-A when prompted to enter the ARC utility. For instructions on creating an array from the BIOS, see [the section- "Adaptec RAID Configuration Utility"](#). For a simple volume, skip to [Step 4](#).
4. When the array is finished building, or if you are continuing from [Step3](#), insert the SuSE CD Disk 1 in the CD-ROM drive and restart the system.
5. When the SuSE Installation menu appears:
  - \* For SuSE 8.1—press the Alt key, then select installation option from the Menu and press Enter.
  - \* For SuSE 8.2—press the F3 key, then select installation option from the Menu and press Enter.
6. When prompted, insert the driver disk you created (see [Step 1](#)) and press any key to continue.
7. Follow the prompts to set up your preferred environment.
8. Continue with the Linux installation according to the SuSE documentation.
9. After reboot occurs the SuSE Menu appears:
  - \* For SuSE 8.1—type noapic at the boot options, then press Enter.
  - \* For SuSE 8.2—type acpi=off at the boot options, then press Enter.
 (\*Note: See [Step 10](#) to include these parameters automatically during bootup.)
10. When the Linux installation is complete, go to the script file by typing:
  - \* For SuSE 8.1 edit/boot/grub/menu.lst  
Type noapic after vga=xxx as in this example:  
Kernel(hd0,0)/vmlinuz root=/dev/hdc3 vga=791 noapic
  - \* For SuSE 8.2 edit/boot/grub/menu.lst  
Type acpi=off after vga=xxx as in this example:  
Kernel(hd0,0)/vmlinuz root=/dev/hdc3 vga=791 acpi=off

## **Installing or Updating the Driver in an Existing Red Hat or SuSE Linux System**

- \* To install the driver in an existing Red Hat or SuSE Linux system, type:  
rpm -Uvh xxx.yyy.rpm
  - \*To update the driver in an existing Linux system, type:  
rpm -Uvh —force xxx.yyy.rpm
- where xxx is the name of the driver file and yyy is the processor type.



## D-3 Installing Adaptec Storage Management

### A. Browser Edition

#### Overview

This chapter discusses the installation procedure for installing Adaptec Storage Manager – Browser Edition to enable remote and local management of arrays.

#### **Browsers supported:**

To run Adaptec Storage Manager – Browser Edition, your computer must have a Web browser supporting JavaScript and cookies only. The following versions are supported:

#### Windows

- \* Internet Explorer (IE) 5.0 or later
- \* Netscape 7 or later

#### Linux

- \* Adaptec-supplied and installed version of Mozilla
- \* Netscape 7 or later

When using Adaptec Storage Manager, you need to log on to your system with administrator privileges.

#### **Typical, Custom, and Compact Installations**

You can select from these setup options:

\* Typical (default)—Supports local and remote management; however, Adaptec SNMP is not included.

\* Custom—For expert users. Primarily used on Web servers or when you want to make sure SNMP and Notifier are available for a managed system.

You can select from these components:

\* Managed System Components—If you choose this selection only, the installation is the same as a Compact installation.

\* Adaptec Web Server—Installs components allowing managed systems to communicate with Web browsers.

\* Adaptec Storage Manager Notifier—Installs messaging, including email and broadcaster capabilities.

\* Adaptec SNMP—Installs components used by SNMP-based applications. Requires Microsoft SNMP agents to be installed to function. Not included in a Typical installation.

\* Compact—Installs only the components required on a remotely managed system. See Managed System Components, above.

(\*Note: When you perform a Typical or Compact installation, components needed for communication and remote management are installed automatically.\*)

## **B. On Windows**

**\*\*Note:** When installing on a FAT 32 file system, the folder being installed is automatically hidden.)

### **To install Adaptec Storage Manager – Browser Edition**

1. Verify that a supported browser is installed. See [the section-"Supported Browsers"](#) for details.
2. Insert the product installation CD and wait for the Autorun executable to start the installation. If this does not occur, browse the CD and click Autorun.
3. Click Adaptec Utilities.
4. Click Install Adaptec Storage Manager.
5. Click Next in the Install Shield window.
6. Read the license agreement. If you agree to its terms, click Yes. If not, click No and terminate the installation.

The Select a Setup Type window appears. It provides three types of installations: Typical, Compact, and Custom. See [the sections regarding: "Typical, Custom, and Compact Installations"](#) for details.

7. Choose a setup type and click Next.
8. When you see the Destination Folder, click Next.
9. When you see the Setup Information, click Next.

The Setup Status window shows progress using a scroll bar. Before the scroll bar shows the installation is completed, another window pops up indicating that a security certificate has been generated.

10. Click OK.

The Root Certificate Store window appears.

11. Click Yes.

The security certificate generated during installation is added to the Certificate Store. If you click No at this point, you will need to install the certificate the first time you run Adaptec Storage Manager.

12. When prompted to restart your computer, accept the default (Yes) and click Finish.
13. The system restarts to complete the installation.
14. Remove the product installation CD before the system restarts; otherwise, the installation will start again.

### **Configuring Internet Browsers on Windows**

If you are managing a local storage array and your computer uses a proxy server, you need to configure your browser to enable Adaptec Storage Manager to bypass the proxy server. Also, if you are managing remote systems, you need to configure Adaptec Storage Manager to bypass the proxy server when communicating with these systems.

### **Configuring Internet Explorer for Local Management**

When using the High security setting, you must enable the following settings manually:

- \* JavaScript
- \* Cookies (not stored)

You do not need to enable the following custom level security settings for the local Intranet in Internet Explorer 5 and 5.5. Select Tools > Internet Options to access these settings:

- \* Active Scripting
- \* Allow per session cookies (not stored) (\*Note: In Internet Explorer 6.0 there is no security setting for cookies. Cookie configuration was removed from the Privacy tab. There is no setting for blocking Intranet cookies.)

If you are using a proxy server to access the Internet, you must bypass the proxy server to access the Adaptec Storage Manager Web server. To verify whether you are using a proxy server:

1. From the Internet Option window, click the Connections tab.
2. Click LAN Settings.

\* If the Use a proxy server box isn't checked, exit by clicking OK. You aren't using a proxy server, so ignore this setting.

\* If the Use a proxy server box is checked, make sure the Bypass proxy server for local addresses box is also checked. Then, click the Advanced button. In the Exceptions window, enter localhost as an entry. You are now ready to proceed to [the section-"Using Adaptec Storage Manager – Browser Edition"](#).

### **Configuring Internet Explorer for Remote Management**

If you know the IP address of the system you want to manage remotely:

1. Choose Tools > Internet Options > Connections > LAN Settings.
2. Select Use a proxy server for your LAN > Advanced.
3. In the Exceptions section, type the managed system's IP address.

### **Configuring Netscape Navigator for Local Management**

(\*Note: These instructions apply specifically to version 7 and may differ in later versions.)

To configure Netscape Navigator:

1. Log in to your computer with administrator access.
2. Select Edit > Preferences.
3. In the Preferences window, click the right arrow on the Privacy and Security line. Ensure that one of the Enable cookies options is selected.
4. Select the Advanced line. Ensure that Enable Javascript for Navigator is checked.
5. Exit Navigator, then restart it. This enables any settings you have modified.

6. You are now ready to proceed to [C-4-"Using Adaptec Storage Manager – Browser Edition"](#).

#### Configuring Netscape Navigator for Remote Management

If you know the IP address of the system you want to manage remotely:

1. Choose Edit> Preferences > Advanced> Proxies > Manual proxy configuration > No Proxy For.
2. Type the managed system's IP address.

#### **To install Adaptec Storage Manager on Linux**

(\*Note: When performing this installation, keep in mind that Linux is case sensitive.)

To install Adaptec Storage Manager on a Linux computer and configure the desired Internet browser:

1. Insert the product installation CD.
2. Install the software by typing: `sh <mount-point>/install.sh`.  
The <mount-point> differs among computers, but /mnt/cdrom, /media/cdrom, or cdrom usually works. A Welcome window appears.
3. Click Next. The License Agreement window appears.
4. Read the license agreement. If you agree to its terms, click Accept. If not, click Cancel and terminate the installation.

The Choose Setup Type window appears. It provides three types of installations: Typical, Compact, and Custom. See [the section-"Typical, Custom, and Compact Installations"](#) for details.

5. Choose a setup type and click Next. The Start Copying window appears.
6. Click Next. The Running Non-Interactive Setup window displays the files being loaded onto the system.
7. Click Next when prompted. A Setup Complete window appears.
8. Click Complete. A message window appears reminding you that any proxy servers must be bypassed for the RAID management application to work.
9. Click OK. The Shell window you used to launch the installation indicates that some daemons are being started.

The installation creates a shortcut to Adaptec Storage Manager in the System tab. This shortcut launches Adaptec Storage Manager using Mozilla.

Unless the controller driver was installed as part of this installation, you do not need to restart your computer.

10. Remove the product installation CD.

Your computer must have a Web browser supporting JavaScript and cookies. To use Adaptec Storage Manager, you need to log on to your computer with root privileges.

## **D-4.Using Adaptec Storage Manager(-Browser Edition)**

### **Overview**

This chapter describes how to use Adaptec Storage Manager – Browser Edition to manage arrays.

(\*Note: Your controller may not support all of the features described. In most cases if a feature is not supported by your controller, the feature does not appear in the interface.)

With Adaptec Storage Manager, you can:

- \* Locally manage a system containing a supported Adaptec RAID controller that has Windows or Linux and a supported browser.
- \* Remotely manage any system containing a supported Adaptec RAID controller that has Managed System Components (see [the section regarding Typical, Custom, and Compact Installations](#)). You can manage a system remotely from a system that does not contain a RAID controller.

These same Windows and Linux systems can also be managed remotely by either of these methods:

- \* Installing Adaptec Storage Manager on the remote system.
- \* Directing the browser on the remote system to the system you want to manage.

(\*Note: To manage an array remotely from a Linux system, install Adaptec Storage Manager on the system and use the Adaptec-supplied version of Mozilla as the browser.)

### **Architecture Overview**

A locally managed system requires all of these components:

- \* A supported Web browser, which should already be installed on the system.
- \* The Adaptec Web service which supplies content displayed on the Web browser.
- \* An Adaptec-supplied storage agent.

A remotely managed system requires all of these components:

- \* The remote system must contain a browser.
- \* The storage agent must always be installed on the system with the RAID controller installed.
- \* Remote and managed systems must have a TCP/IP connection.

The Web service can be installed on the same remote system as the browser, the system with the RAID controller installed, or a third system.

Communication security is ensured because Secure-HTTP

(S-HTTP) or SSL protocols are used to encrypt all transmitted data. Connection over an Ethernet network, a corporate WAN, or VPN are supported.

## **Logging In**


To login:

1. Start Adaptec Storage Manager – Browser Edition.

\* In Windows, click Start > Programs > Adaptec Storage Manager > Adaptec Storage Manager – Browser Edition.

\* In Linux, click Start > System > Adaptec Storage Manager.

The Login screen appears.

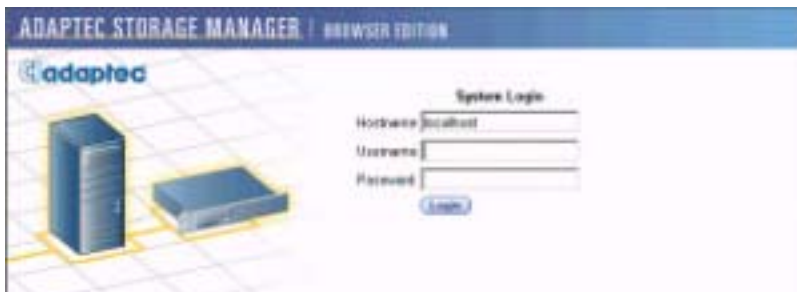

2. Enter the host name or IP address of the system you want to manage and the username and password you would use to log into that system.

3. Click Login.

(\*Note:

When running Adaptec Storage Manager for the first time:

\* You need to install a security certificate if you chose not to during the installation process. For instructions see the section-"[Installing a Security Certificate](#)."

\* You are asked to register your software. For instructions see the section-"[Registering Your Software](#)".

To log in from any system with a Web browser:

1. Start the Web browser application and type the IP address for the system you want to access in the address bar and press Enter. For example, <https://10.6.3.14:3513/adaptec>.

When connection to the remote system is established, the System Login screen appears.

(\*Note: If you are using a proxy server to access the Internet, you must bypass the proxy server to access the Adaptec Storage Manager Web server. See the section-"[Configuring Internet Browsers on Windows](#)" for details.)

2. Enter the host name or IP address of the system you want to manage and the administrative username and password that you would normally use to log into that system.

3. Click Login.

## Installing a Security Certificate

If you chose not to install a security certificate when you installed Adaptec Storage Manager – Browser Edition, you must install the certificate when you run the application for the first time.

### To create the certificate:

1. When the Security Alert window appears, click View Certificate.
2. On the Certificate window, click Install Certificate.
3. On the Certificate Import wizard window, click Next. The Certificate Import wizard window's contents change.
4. Accept the default, Automatically select the certificate store, and click Next.

5. On the root Certificate Store window, click Yes.

Another small Certificate Import wizard window appears.

6. Click OK. The Certificate window mentioned in [Step 2](#) reappears.
7. Click OK. You are returned to the Security Alert window from [Step 1](#).
8. Click Yes to finish the creation and storage of the certificate.

### Registering Your Software

After installing and creating a security certificate, you are asked to register the product. If you want click Register Now, your computer must have an Internet connection. If you need to delay registration, click Register Later. If you choose Register Later, you will be prompted to register the application the next time you run it.

### The Basics

An example of a typical Adaptec Storage Manager – Browser Edition screen is shown below.



(\*Note: Depending on your operating system, browser, and color scheme you may notice some differences between this illustration and your screen.)

The action buttons are:

\* Logout—Selecting Logout ends your session and returns you to the Login screen.

\* Rescan—Used to rescan the configuration of the system. Typically, when a rescan is required, it occurs automatically; for example, after an array is created.

However, the system configuration can change without Adaptec Storage Manager being notified. For example, drives that are inserted or removed from a nonintelligent enclosure, or an enclosure powered on after you logged into Adaptec Storage Manager would not be displayed unless you manually rescan.

The remaining buttons open additional windows that provide more detailed information, and allow you to perform actions or change settings on a specific aspect of your storage subsystem. These are:

- \* Events
- \* Options
- \* Help
- \* Properties
- \* Tasks

Immediately following the header frame is a controller information line including the model number of the first Adaptec RAID controller found in the system, and the amount of cache memory (if any) installed on that controller.

Beneath the controller information are Physical Devices and Logical Devices views that show connected devices and existing arrays on this controller. Controller information and device views are repeated for each additional Adaptec RAID controller in the system.

Select the controller by clicking anywhere on the controller information.

When the controller is selected, the Events, Properties and Tasks buttons change from blue to amber, indicating that clicking any of them will display an additional window with information and options specific to this controller.

### **Pop-Up Tool Tips**

If you position the cursor over a device or button a pop-up tool tip appears. For buttons, the tips contain helpful information about the function of the button, while for devices they display additional information.



## Physical Devices

The Physical Devices view displays information about the drives and enclosures attached to the Adaptec RAID controller. The devices are shown organized by the channel or port that they are connected to and shown in numerical order.

The display for each channel includes information on maximum speed capability, the number of the channel on the controller, and the number of devices found (excluding the SCSI controller).

Selecting a channel or device will turn the Events, Properties, and Tasks buttons amber. This indicates that clicking any of these buttons will display an additional window with information and options specific to that device or channel.

At the top of the Physical Devices view, grouped to the right of View, are three view selection buttons. These buttons select the physical devices connected to this controller.



### Changing How Drives are Displayed

By default, the Physical Devices displays a condensed view of the controller configuration that hides detailed information about the drives. More information is available by either positioning the mouse pointer over the device or clicking on the arrowhead to the left of a row of devices.

The selected display mode button will appear in a lighter shade of blue than the other two buttons. The default display is the Text Description View, but in the condensed view used when Adaptec Storage Manager is loaded, the display is the same in all three modes.

If you change the display mode by selecting one of the other view buttons, a yellow arrow flashes to the left of any devices where the condensed display prevents omits information.






An icon is always the first entry on each device line. The  icon is used to represent a hard disk drive. If a + symbol appears with the hard disk drive icon , the drive is a hot spare. Different icons are used to represent other devices.


... **W**  


is the default display mode and when expanded, will show the following information about each device:

- \* Capacity of the drive
- \* Drive manufacturer and model number
- \* SCSI drive ID, or Serial ATA port number

When expanded, the Full Size Capacity View button  and the Relative Size Capacity View button  represent each drive as a bar. A drive that is not used as part of any array is shaded blue surrounded by a dotted line.

 displays a full-length bar for each drive, regardless of capacity.

 displays a bar for each drive, with the largest capacity drive full-length and the other drives proportional to the drive capacity, relative to the largest drive.

Any part of a drive used in an array is shown as a gray segment within the bar. Selecting any gray segment will highlight it in amber, and in the Logical Devices view, highlight the array of which this segment is a member.

In either the Full Size Capacity View or the Relative Size Capacity View, a small portion at each end of the drive may be shown in dark gray.

The segment at the end of the drive may vary in size from drive to drive because, in addition to the RAID signature, the controller may also limit the usable capacity of each drive.

This is done because hard disk drives of apparently the same capacity from different manufacturers, or even different models from the same manufacturer, actually vary slightly in the true capacity available. Although, in normal operation this is not an issue, it can be when assigning hot spares or replacing a failed drive.

If the controller used the maximum capacity of each drive and a hot spare or replacement drive was just a few megabytes smaller, it would not be able to replace the failed drive. By rounding drive capacities down to the nearest 2 MB, this possibility is effectively eliminated.

### **Logical Devices**

As described earlier, when Adaptec Storage Manager loads, the Logical Devices view is expanded and you can see the arrays present on the controller.

At the top of this view are the following buttons: Create, Modify, and Delete. Each button opens a wizard for the corresponding function.

Modify allows you to:

- \* Change an array from one RAID level to another
- \* Expand an array
- \* Change the stripe size for a RAID 0

For detailed instructions on using these buttons, refer to the online Help. The main area of the Logical Devices view is used to display the arrays on this controller. It defaults to a condensed view of top-level arrays. (\*Note: The Options button allows you to display second-level arrays if your controller supports them.)

In this condensed view, the RAID level of each device, as well as whether it is protected by a hot spare, is visible.

If a global hot spare exists, all arrays that the hot spare is large enough to protect will show as protected.

In the expanded view, the icons for the arrays are arranged vertically and alongside them are the capacity, name, and type of array.

Selecting an array by clicking on it will highlight the following in amber:

- \* All the drives or segments that form the array in the Physical Devices view.

- \* The Events, Properties, and Tasks buttons in the header frame. Selecting any of these three buttons displays a new window with additional information and options specific to that array.

(\*Note: For Windows Server 2003 only—to see animated icons on Adaptec Storage Manager - logical devices, go to Internet Explorer Properties/Advanced/Multimedia, and select the Play animations in Web Pages option.)

## D-5 Adaptec RAID Configuration Utility

The Array Configuration Utility (ACU) enables you to create, manage, and delete arrays from the controller's BIOS, and initialize drives.

### **A. Managing Arrays**

Select the Manage Arrays option to view array properties and members, and delete arrays. The following sections describe these operations in greater detail.

#### Viewing Array Properties

To view the properties of an existing array:

1. At the BIOS prompt, press Ctrl+A.
2. From the ARC menu, select Array Configuration Utility (ACU).
3. From the ACU menu, select Manage Arrays.
4. From the List of Arrays dialog box, select the array you want to view and press Enter.

The Array Properties dialog box appears, showing detailed information on the array. The physical disks associated with the array are displayed here.

5. Press Esc to return to the previous menu.

#### Deleting Arrays

**(Caution:** Back up the data on an array before you delete it. Otherwise, all data on the array is lost. Deleted arrays cannot be restored.)

#### To delete an existing array:

1. Turn on your computer and press Ctrl+A when prompted to access the ARC utility.
2. From the ARC menu, select Array Configuration Utility (ACU).
3. From the ACU menu, select Manage Arrays.
4. Select the array you wish to delete and press Delete.
5. In the Array Properties dialog box, select Delete and press Enter. The following prompt is displayed:

**Warning!!** Deleting the array will render array unusable. Do you want to delete the array?(Yes/No):

RAID 1 only—the following prompt is also displayed:

Deleting the partition will result in data loss! Do you also want to delete the partition? (Yes/No):

6. Press Yes to delete the array or partition or No to return to the previous menu.
7. Press Esc to return to the previous menu.

## B. Creating Arrays

Before creating arrays, make sure the disks for the array are connected and installed in your system. Note that disks with no usable space, or disks that are not initialized are shown in gray and cannot be used. See [Initializing Disk Drives](#).

### To create an array

1. Turn on your computer and press Ctrl+A when prompted to access the ARC utility.
2. From the ARC menu, select Array Configuration Utility (ACU).
3. From the ACU menu, select Create Array.
4. Select the disks for the new array and press Insert. To deselect any disk, highlight the disk and press Delete.
5. Press Enter when both disks for the new array are selected. The Array Properties menu displays.

### Assigning Array Properties

(\*Note: Once the array is created and its properties are assigned, you cannot change the array properties using the ACU. Instead, use Adaptec Storage Manager - Browser Edition.)

### To assign properties to the new array:

1. In the Array Properties menu, select an array type and press Enter. Note that only the available array types, RAID 0, RAID 1, and RAID 10, are displayed. Each of these types requires two drives.
2. Type in an optional label for the array and press Enter.
3. For RAID 0, select the desired stripe size. Available stripe sizes are 16, 32, and 64 KB (default).

(\*Note: Adaptec recommends that you do not change the default.)

4. Create RAID via allows you to select between the different creation methods for RAID 0, RAID 1, and RAID 10. The following table gives examples of when each is appropriate.

RAID level	Create via	When appropriate
RAID 0	No Init	Creating a RAID 0 on new drives.
RAID 0	Migrate <sup>1</sup>	Creating a RAID 0 from one new drive and one drive with data you wish to preserve.
RAID 1 RAID 10	Build <sup>1</sup>	Any time you wish to create a RAID 1 or RAID 10, but especially if you have data on one drive that you wish to preserve.
RAID 1 RAID 10	Clear	Creating a RAID 1 or RAID 10 on new drives, or when you want to ensure that the array contains no data after creation.
RAID 1 RAID 10	Quick Init	Fastest way to create a RAID 1 or RAID 10. Appropriate when using new drives.

Note 1. If you select Migrate for RAID 0, or Build for RAID 1 or RAID 10, you will be asked to select the source drive. The contents of the source drive will be preserved. However, the data on the new drive will be lost.

(\*Notes:)

\* Before adding a new drive to an array, back up any data contained on the new drive. Otherwise, all data will be lost.

\* If you stop the Build or Clear process on a RAID 1 or RAID 10 from ACU you can only restart it from Adaptec Storage Manager -Browser Edition. (See C-4 for details.)

\* A RAID 1 created using the Quick Init. Option may return some data if you later run a consistency check. This is normal and is not a cause for concern.

\* The ACU allows you to use drives of different sizes in a RAID 1 or RAID 10. However, during a build operation, only the smaller drive can be selected as the source or first drive.

\* When migrating from single volume to RAID 0, migrating from a larger drive to a smaller drive is allowed. However, the destination drive must be at least half the capacity of the source drive.

\* Adaptec does not recommend that you migrate or build an array on Windows dynamic disks (volumes), as it will result in data loss.

**(Caution:** Do not interrupt the creation of a RAID 0 using the Migrate option. If you do, there is no way to restart, and no way to recover the data that was on the source drive.)

5 When you are finished, press Done.

### **C. Initializing Disk Drives**

If an installed disk does not appear in the disk selection list for creating a new array, or if it appears grayed out, you may have to initialize it before you can use it as part of an array. Drives attached to the controller must be initialized before they can be used in an array.

**(Caution:** Initializing a disk overwrites the partition table on the disk and makes any data on the disk inaccessible. If the drive is used in an array, you may not be able to use the array again. Do not initialize a disk that is part of a boot array. To determine which disks are associated with a particular array, see the section-"[Viewing Array Properties](#)".)

To initialize drives:

1. Turn on your computer and press Ctrl+A when prompted to access the ARC utility.
2. From the ARC menu, select Array Configuration Utility (ACU).
3. Select Initialize Drives.
4. Use the up and down arrow keys to highlight the disk you wish to initialize and press Insert.
5. Repeat [Step 4](#) so that both drives to be initialized are selected.
6. Press Enter.
7. Read the warning message and ensure that you have selected the correct disk drives to initialize. Type Y to continue.

### Using the Disk Utilities

The Disk Utilities enable you to format or verify the media of your Serial ATA hard disks.

To access the disk utilities:

1. Turn on your computer and press Ctrl+A when prompted to access the ARC utility.
2. From the ARC menu, select Disk Utilities.
3. Select the desired disk and press Enter. You are offered the following options:

\* **Format Disk**—Simulates a low-level format of the hard drive by writing zeros to the entire disk. Serial ATA drives are low-level formatted at the factory and do not need to be low-level formatted again.

**(Caution:** Formatting destroys all data on the drive. Be sure to back up your data before performing this operation.

\* **Verify Disk Media**—Scans the media of a disk drive for defects.

## **Notes**